



In the U.S.A., you will find your nearest Senco location listed in the Yellow Pages under "Staples". Or, you can call our toll-free Action-line: 1-800-543-4596

## SJS SencoMaticStapler

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATZTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

<b>PART #</b>	<b>DESCRIPTION</b>	<b>DESCRIPCIÓN</b>	<b>BESCHREIBUNG</b>	<b>DÉSIGNATION</b>
AB0048	MAIN BODY ASSY.	ASAMBLE DE CARCASA	GEHÄUSE-ZUSAMMENBAU	CORPS D'ASSEMBLÉE
BA0101	VALVE	VÁLVULA	VENTIL	VALVE
BC0141	RETAINER	JUNTA TÓRICA	SICHERUNGSRING	RETENUE
BC0146	SEAL	SELLO	DICHTUNG	JOINT
BC0220	TUBES	TUBO	RÖHRE	TUBE
BF0028	SEAL	SELLO	DICHTUNG	JOINT
BF0054	SPACER	SEPARADOR	DISTANZSTÜCK	ENTRETOISE
BF0057	VALVE	VÁLVULA	VENTIL	VALVE
BF0063	HOUSING	ALOJAMIENTO	GEHÄUSE	CORPS
BF0064	BUMPER	AMORTIGUADOR	PUFFER	ARRÊT
CA0075	VALVE ASSEMBLY	ASAMBLE DE VALVULA	VENTIL-ZUSAMMENBAU	VALVE D'ASSEMBLÉE
CA0076	VALVE/MOTOR ASSEMBLY	ASAMBLE DE VÁLVULA/MOTOR	VENTIL/MOTOR-ZUSAMMENBAU	VALVE/MOTEUR D'ASSEMBLÉE
CC0126	CORE	VÁSTAGO	VENTILSTIFT	NOYAU
CC0127	CAP	TAPA	KAPPE	BOUCHON
CC0128	HOUSING	ALOJAMIENTO	GEHÄUSE	CORPS
CC0145	SEAL	SELLO	DICHTUNG	JOINT
KB0046	SCREW	TORNILLO	SCHRAUBE	VIS
LB0010	SEAL	SELLO	DICHTUNG	JOINT
LB0013	SEAL	SELLO	DICHTUNG	JOINT
LB0019	SEAL	SELLO	DICHTUNG	JOINT
LB0020	SEAL	SELLO	DICHTUNG	JOINT
LB0760	SEAL	SELLO	DICHTUNG	JOINT
LB0779	SEAL	SELLO	DICHTUNG	JOINT