



SN3

Parts Reference Guide


Made in the U.S.A. 

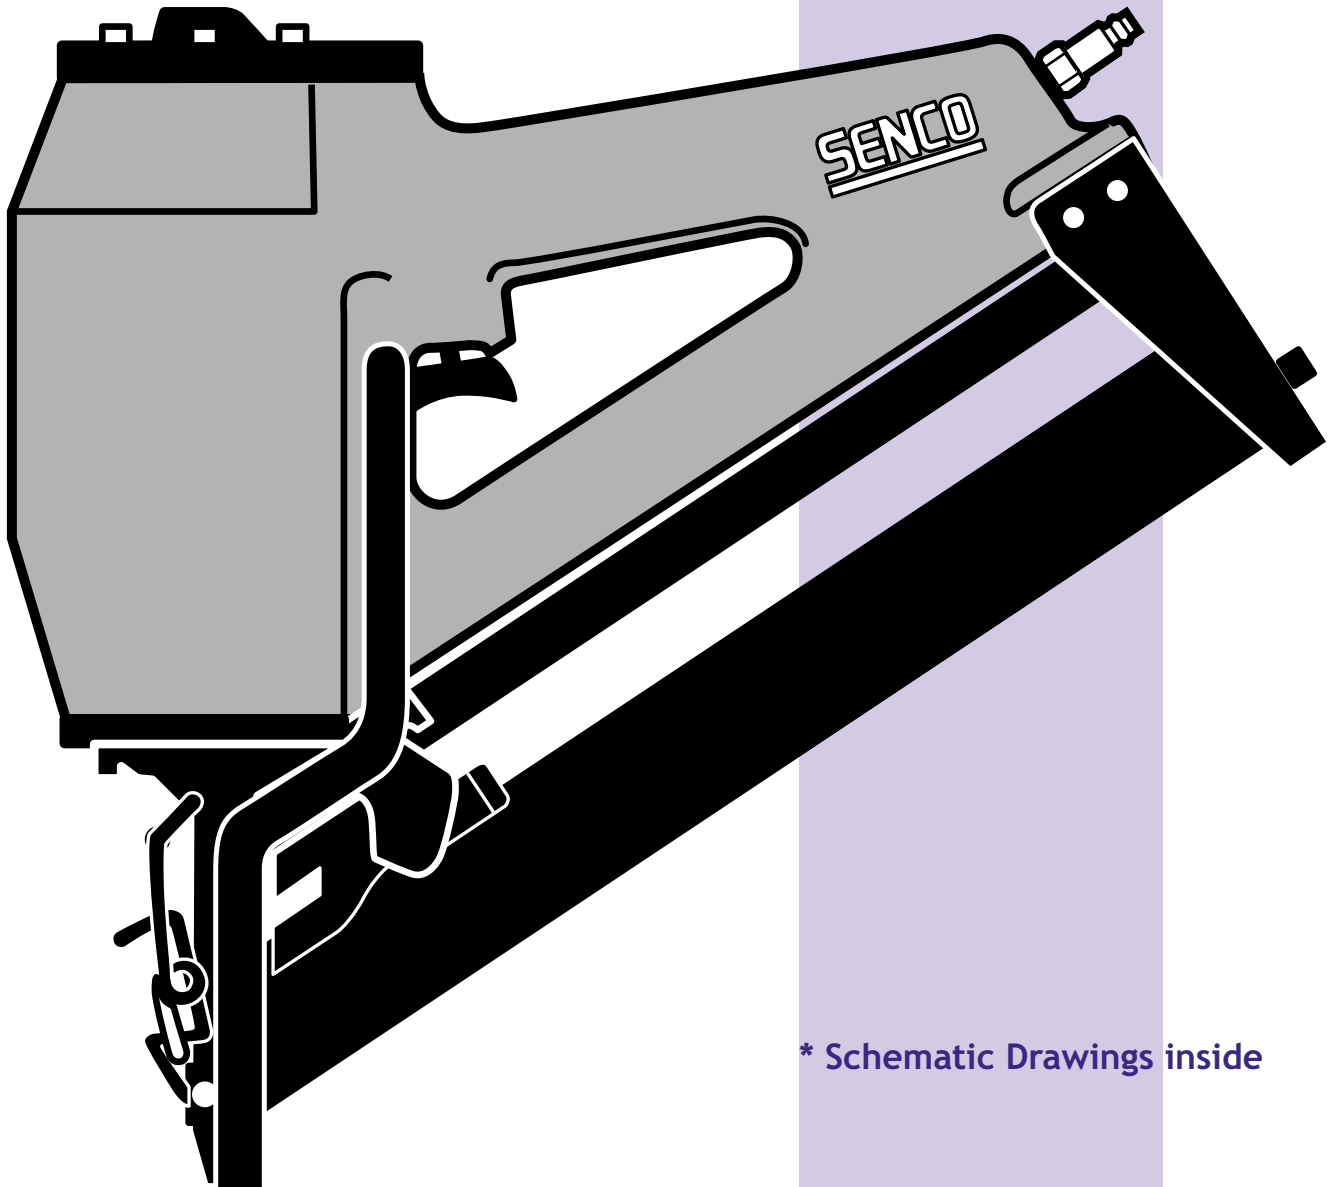

* Schematic Drawings inside

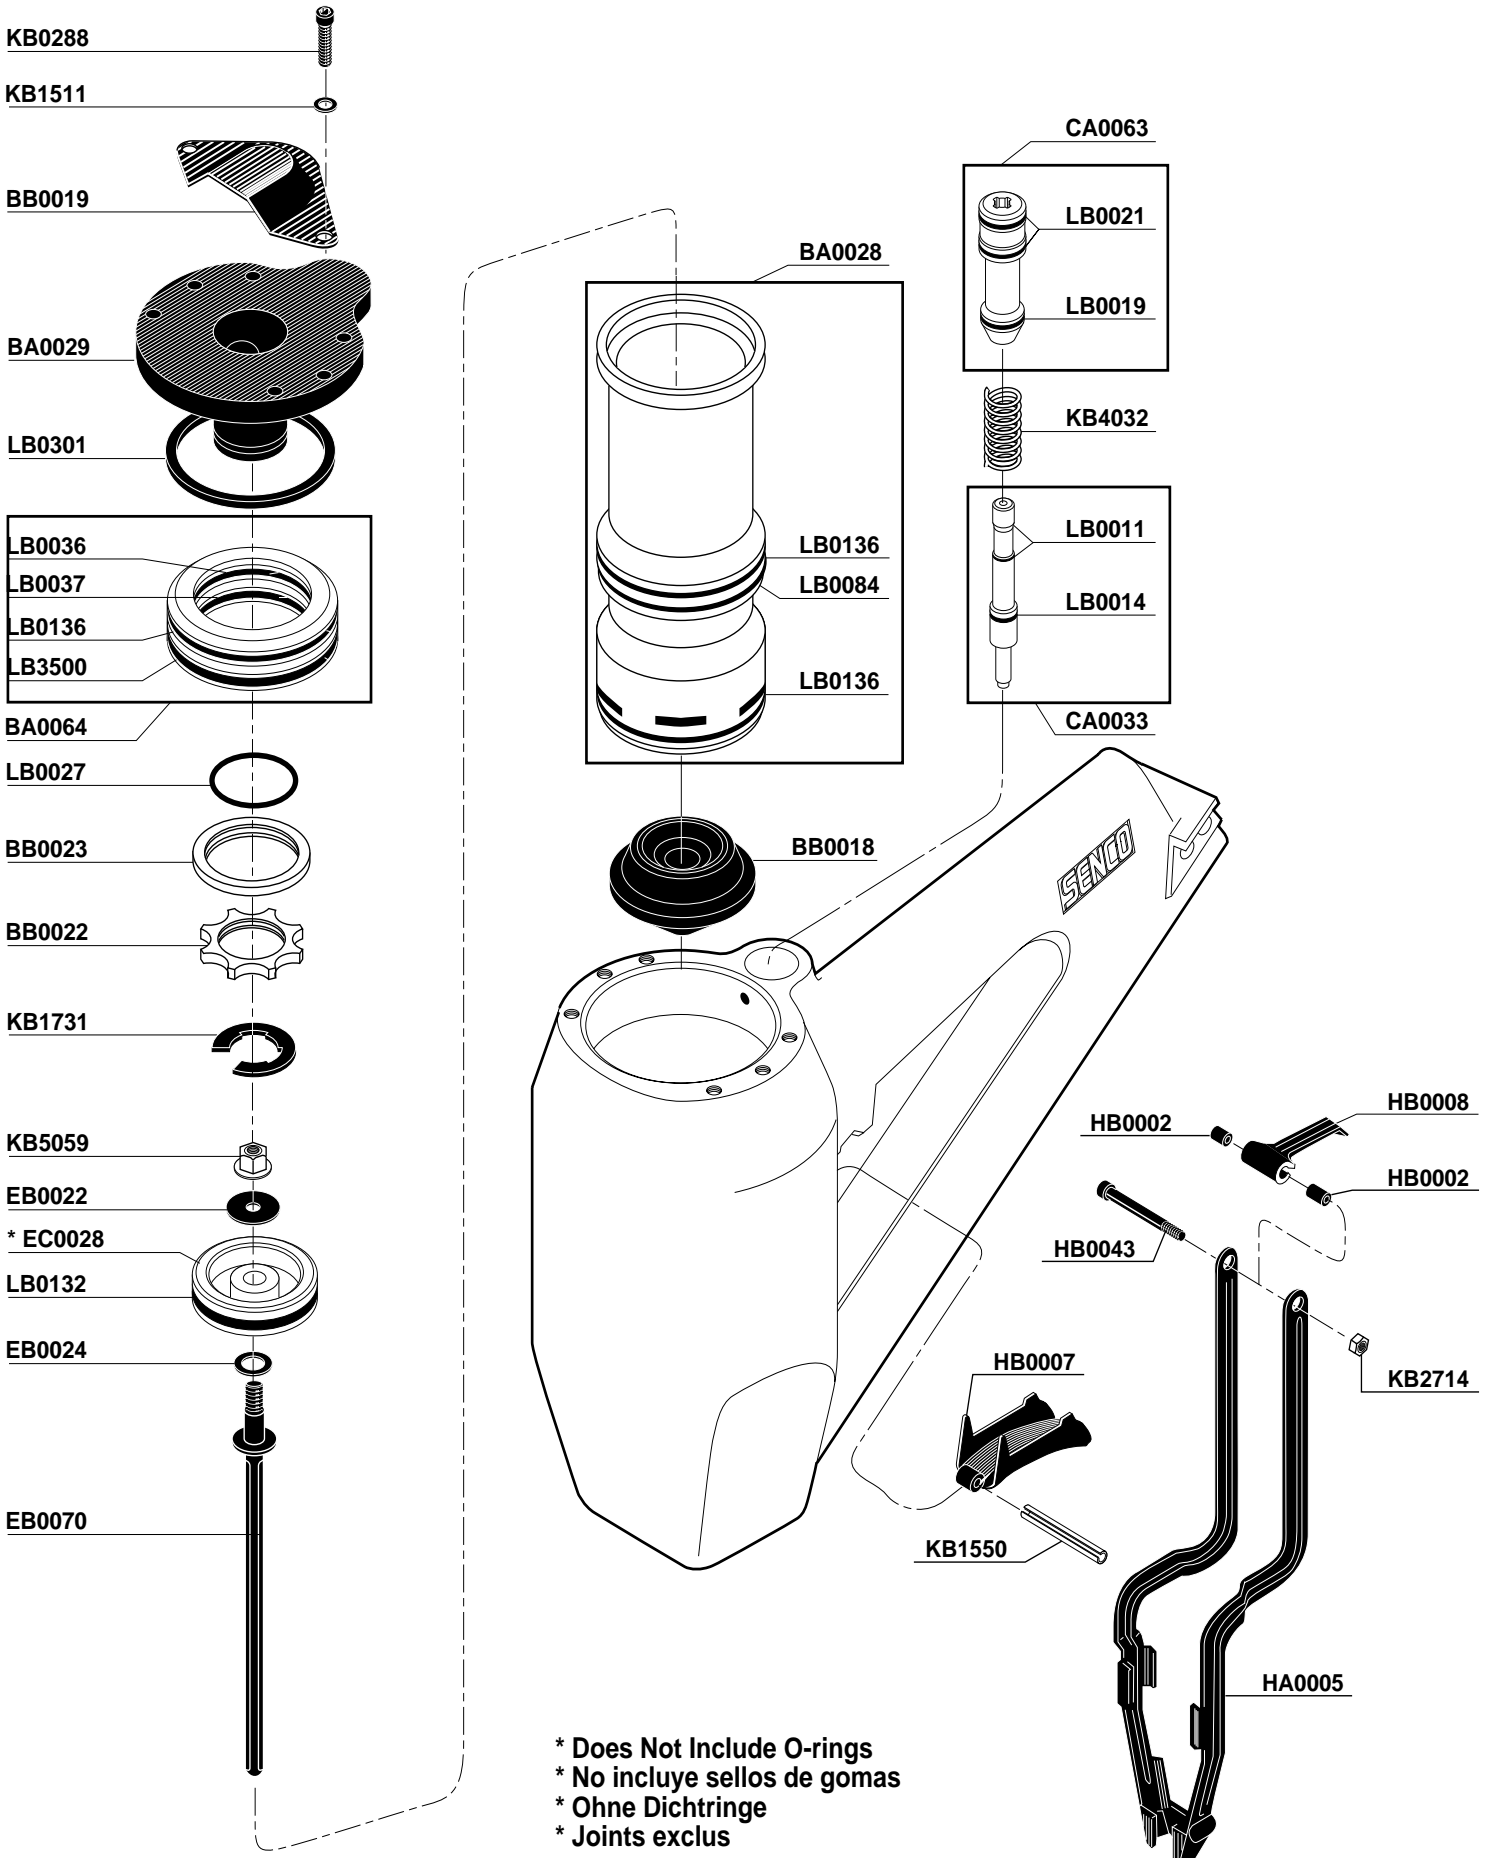

* Does Not Include O-rings
 * No incluye sellos de gomas
 * Ohne Dichtringe
 * Joints exclus

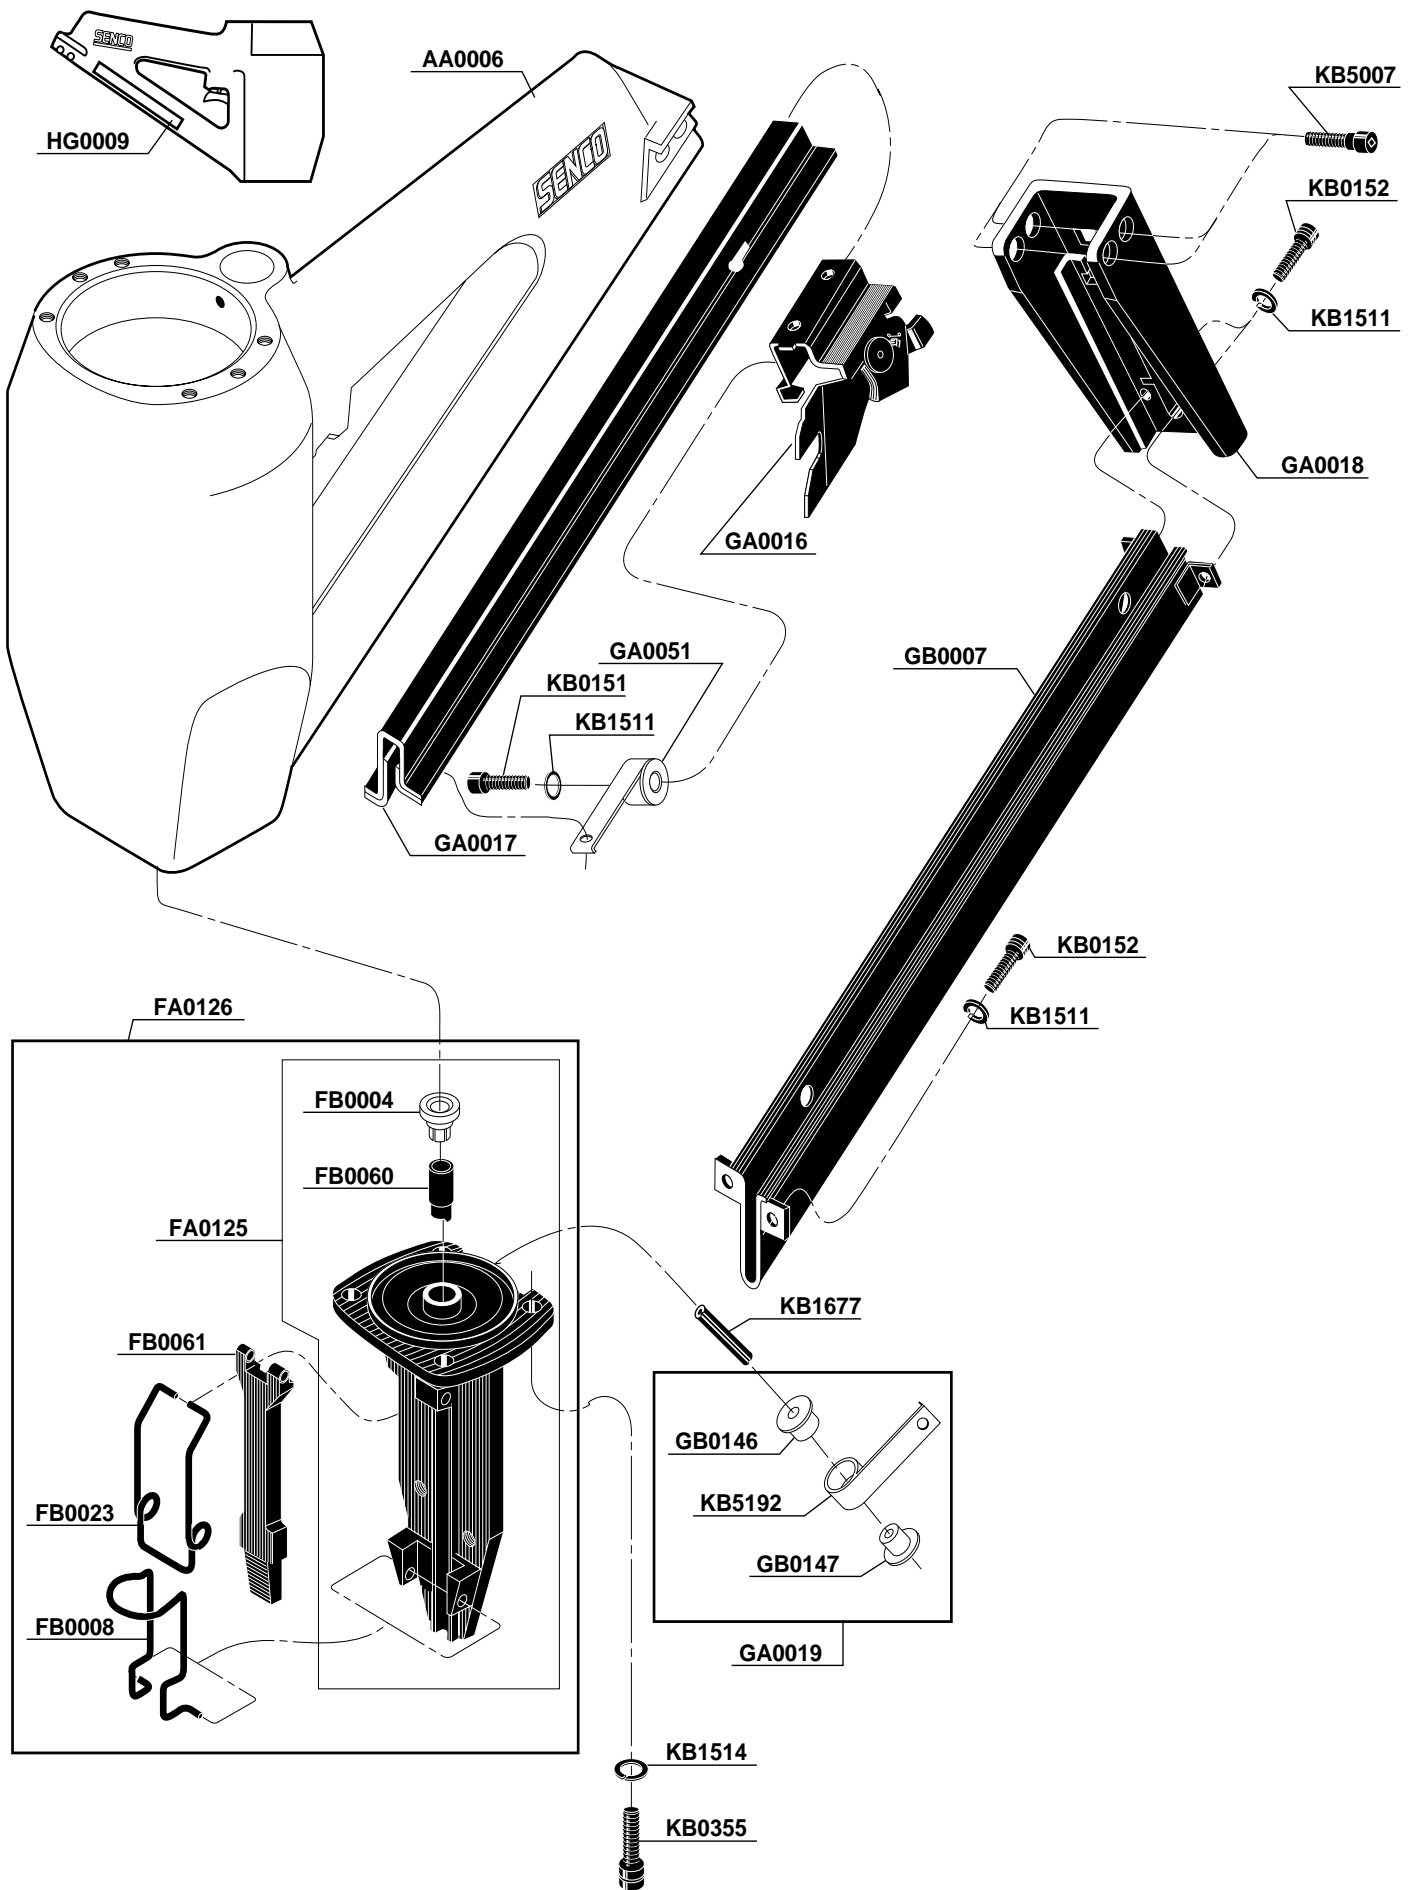



REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATSTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	BESCHREIBUNG	DÉSIGNATION
AA0006	MAIN BODY			
BA0028	CYLINDER ASSY.			
BA0029	CAP			
BA0064	PISTON ASSY.			
BB0018	STOP			
BB0019	DEFLECTOR			
BB0022	SPACER			
BB0023	VALVE			
CA0033	CORE			
CA0063	HOUSING			
EB0021	DRIVER			
EB0024	CUSHION			
EB0068	DRIVER (3/16" CSK.)			
EB0070	DRIVER (3/32" CSK.)			
EC0028	MAIN PISTON			
FA0125	PLATE ASSY.			
FA0126	GUIDE BODY ASSY.			
FB0004	DETENT			
FB0008	LOCK			
FB0023	LOCK			
FB0060	STOP			
FB0061	GATE			
GA0016	FEEDER SHOE			
GA0017	MAGAZINE			
GA0018	BRACKET			
GA0019	SPRING ASSY.			
GA0051	SPRING ASSY.			
GB0007	RAIL			
GB0146	ROLLER			
GB0147	ROLLER			
HA0005	SAFETY			
HB0002	BUSHING			
HB0007	TRIGGER			
HB0008	TRIGGER			
HB0043	PIN			
HB0055	LABEL			
HB0127	LABEL			
KB0151	SCREW			
KB0152	SCREW			
KB0288	SCREW			
KB0355	SCREW			
KB1511	WASHER			
KB1514	WASHER			
KB1550	PIN			
KB1677	PIN			
KB1731	RETAINER			
KB2714	NUT			
KB4032	SPRING			
KB5007	SCREW			
KB5059	NUT			
KB5192	SPRING			
LB0011	SEAL			
LB0014	SEAL			
LB0019	SEAL			
LB0021	SEAL			
LB0027	SEAL			
LB0036	SEAL			
LB0037	SEAL			
LB0084	SEAL			
LB0132	SEAL			
LB0136	SEAL			
LB0301	SEAL			
LB3500	SEAL			