

# 1" Hardwood & Laminate Floor Stapler



**Parts Reference Guide**  
**Guía de referencia**  
**de piezas**  
**Pièces Guide**  
**de référence**

Schematic Drawings Inside  
Plano esquemático en el interior  
Schéma intérieur

# SENCO®


Senco Brands, Inc.  
4270 Ivy Pointe Blvd.  
Cincinnati, OH 45245  
1-800-543-4596  
[www.senco.com](http://www.senco.com)

**NFG049-HF • Revised August 1, 2016 (Replaces 2/15/2016)**

Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596  
(North and South America Only) or email: [toolprof@senco.com](mailto:toolprof@senco.com)

¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596  
(sólo para América del Norte y del Sur) o envíe un correo electrónico: [toolprof@senco.com](mailto:toolprof@senco.com)

 
Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596  
(Amérique du Nord et Amérique du Sud seulement) ou envoyez un courriel: [toolprof@senco.com](mailto:toolprof@senco.com)

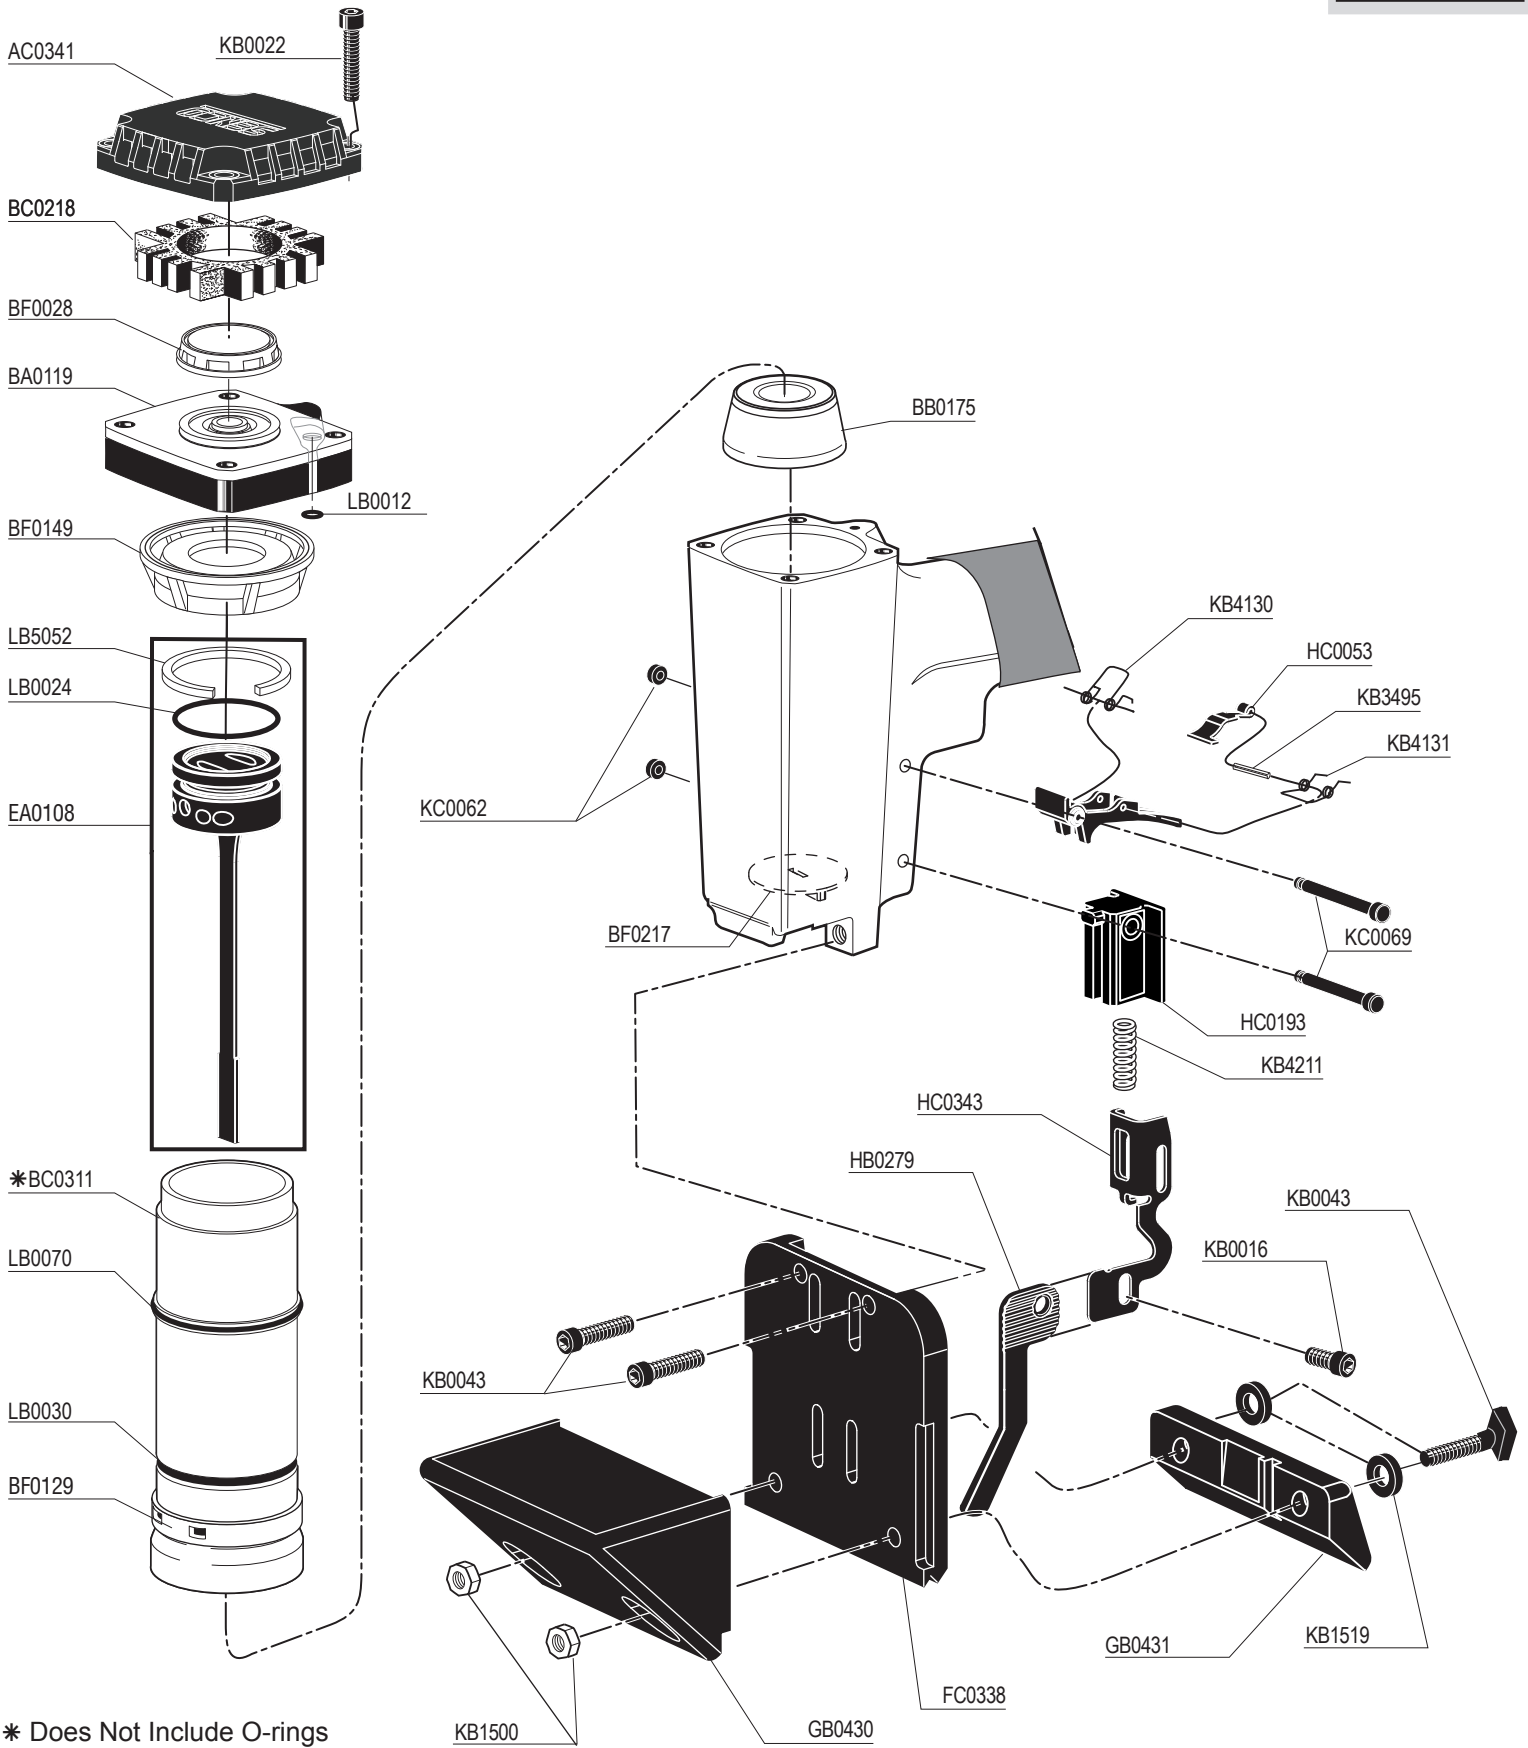

\* Does Not Include O-rings  
 \* No incluye sellos de gomas  
 \* Joints exclus

# 1" Hardwood & Laminate Floor Stapler

 **SLS20XP-HF**

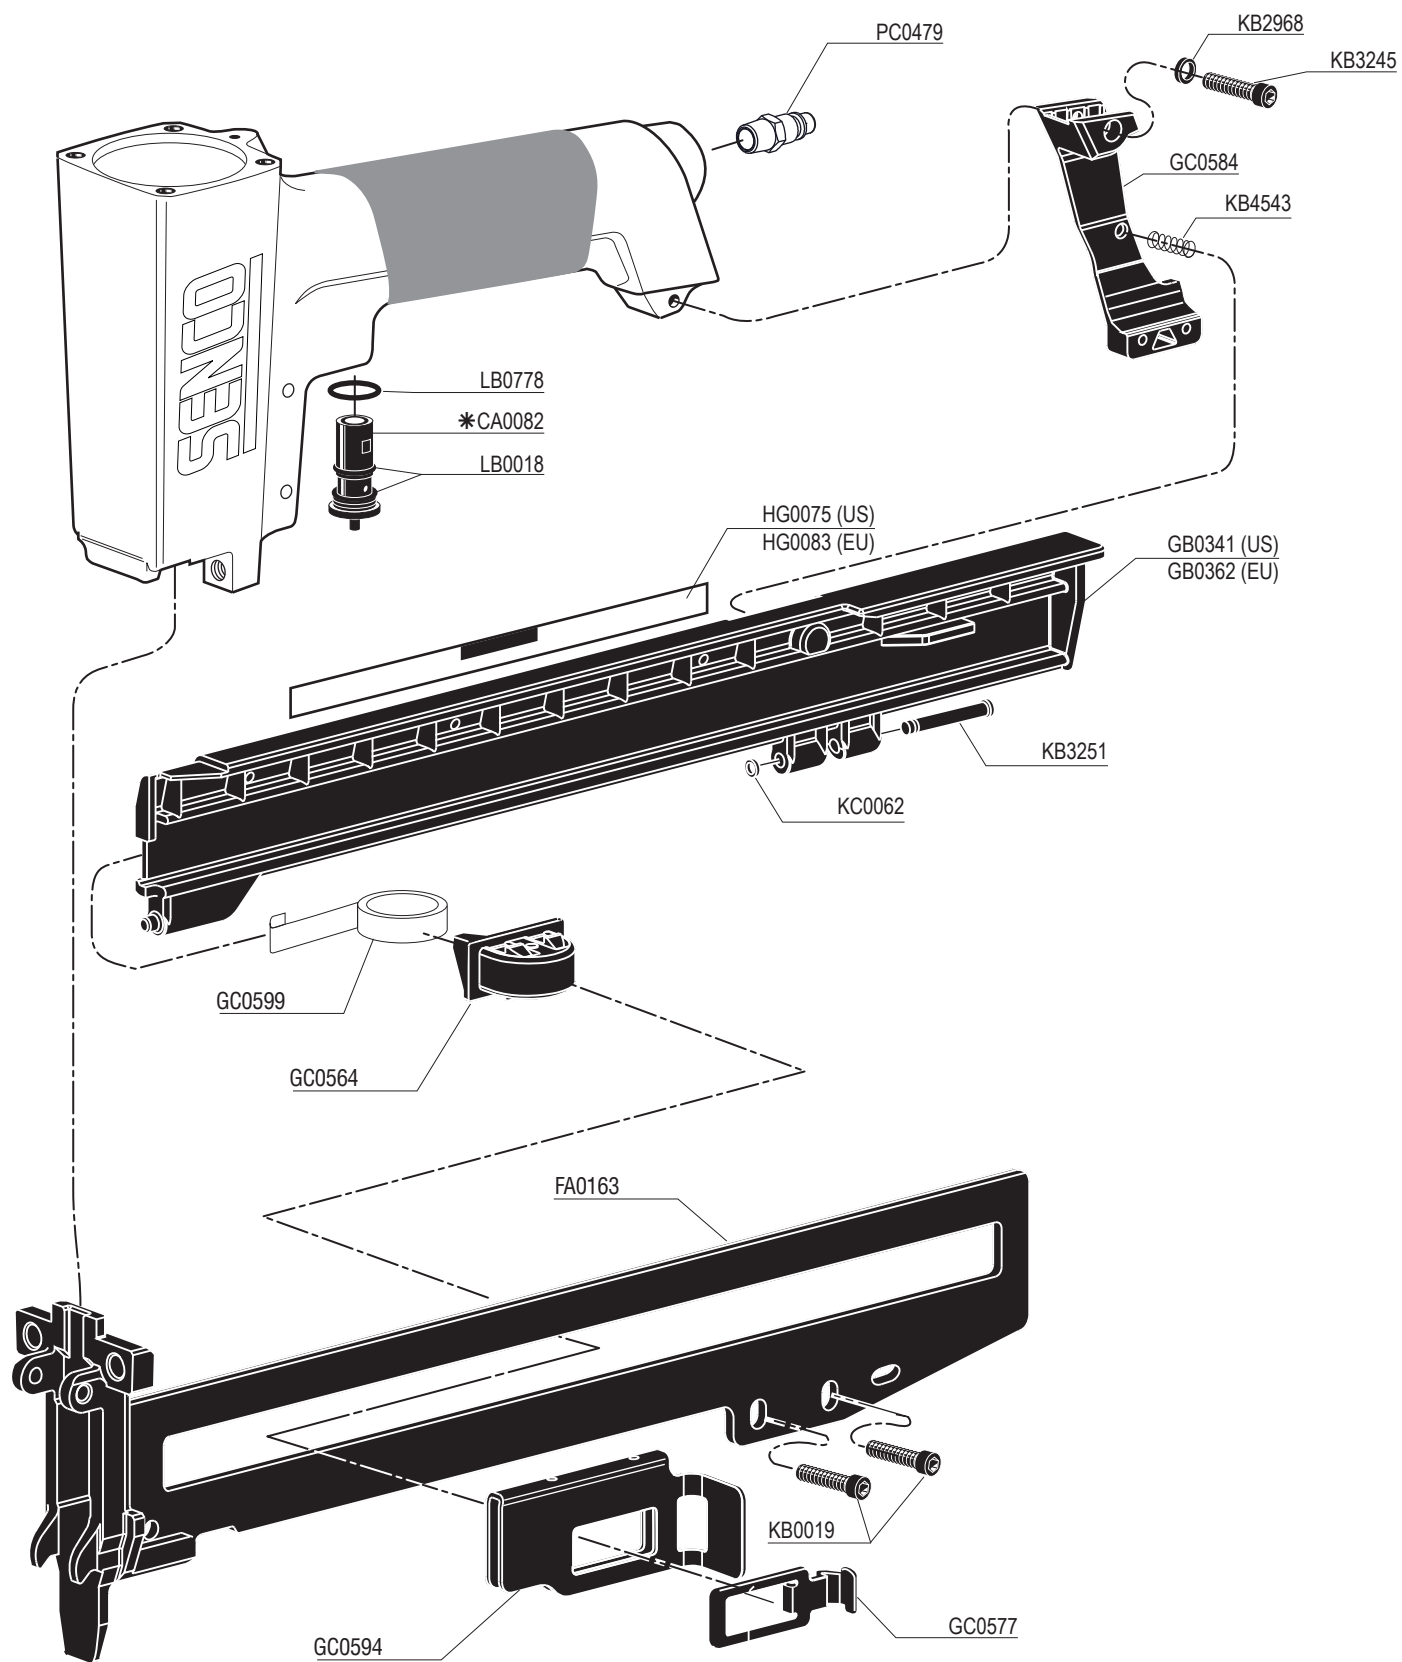

**REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE**

Part No.	Description	Descripción	Désignation
AC0341	Deflector	Desviador	Défecteur
BA0119	Valve Assembly	Asamble De Válvula	Valve d'Assemblée
BB0175	Stop	Tope	Arrêt
BC0218	Muffler	Silenciador	Silencieux
BC0311	Cylinder	Cilindro	Cylindre
BF0028	Seal	Sello	Joint
BF0129	Ring	Anillo	Anneau
BF0149	Retainer	Junta Tórica	Retenue
BF0217	Seal	Sello	Joint
CA0082	Valve Assembly	Asamble De Válvula	Valve d'Assemblée
EA0108	Piston Assembly	Asamble De Piston	Piston d'Assemblée
FA0163	Rail Assembly	Asamble De Carril	Rail d'Assemblée
FC0338	Plate	Placa	Plaque
GB0341	Door (US)	Puerta	Porte
GB0362	Door (EU)	Puerta	Porte
GB0430	Block	Guía	Guide
GB0431	Block	Guía	Guide
GC0564	Cover	Cubierta	Couvercle
GC0577	Latch	Uñeta	Doigt De Retenue
GC0584	Support	Soporte	Support
GC0594	Feeder Shoe	Alimentador	Pousoir
GC0599	Spring	Muelle	Ressort
HB0279	Safety Element	Seguro	Palpeur De Securite
HC0343	Safety Element	Seguro	Palpeur De Securite
HC0053	Trigger	Gatillo	Gachette
HC0193	Guide	Guía	Guide
HG0075	Label (US)	Etiqueta	Étiquette
HG0083	Label (EU)	Etiqueta	Étiquette
KB0016	Screw	Tornillo	Vis
KB0019	Screw	Tornillo	Vis
KB0022	Screw	Tornillo	Vis
KB0043	Screw	Tornillo	Vis
KB1500	Nut	Tuerca	Écrou
KB1519	Washer	Arandela	Rondelle
KB2968	Washer	Arandela	Rondelle
KB3245	Screw	Tornillo	Vis
KB3251	Retainer	Junta Tórica	Retenue
KB3444	T-handle Screw	Tornillo	Vis
KB3495	Pin	Pasador	Goupille
KB4130	Spring	Muelle	Ressort
KB4131	Spring	Muelle	Ressort
KB4211	Spring	Muelle	Ressort
KB4543	Spring	Muelle	Ressort
KC0062	Retainer	Junta Tórica	Retenue
KC0069	Pin	Pasador	Goupille
LB0012	Seal	Sello	Joint
LB0018	Seal	Sello	Joint
LB0024	Seal	Sello	Joint
LB0030	Seal	Sello	Joint
LB0070	Seal	Sello	Joint
LB0778	Seal	Sello	Joint
LB5052	Seal	Sello	Joint
PC0479	Air Fitting	Conexión De Aire	Raccord Air