

18 Ga. Brad Nailer



Parts Reference Guide
Guía de referencia
de piezas
Pièces Guide
de référence

Schematic Drawings Inside
Plano esquemático en el interior
Schéma intérieur

Repair Kit
YK0780

SENCO®

Senco Brands, Inc.
4270 Ivy Pointe Blvd.
Cincinnati, OH 45245
1-800-543-4596
www.senco.com

NFG01U • Revised March 20, 2018 (Replaces 3/27/2017)

Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596
(North and South America Only) or email: toolprof@senco.com


¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596
(sólo para América del Norte y del Sur) o envíe un correo electrónico: toolprof@senco.com

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: toolprof@senco.com

Tool


1U0021N (U.S.)
1U2025N (EU)
1U3025N (AU)

- * Does Not Include O-rings
- * No incluye sellos de gomas
- * Joints exclus

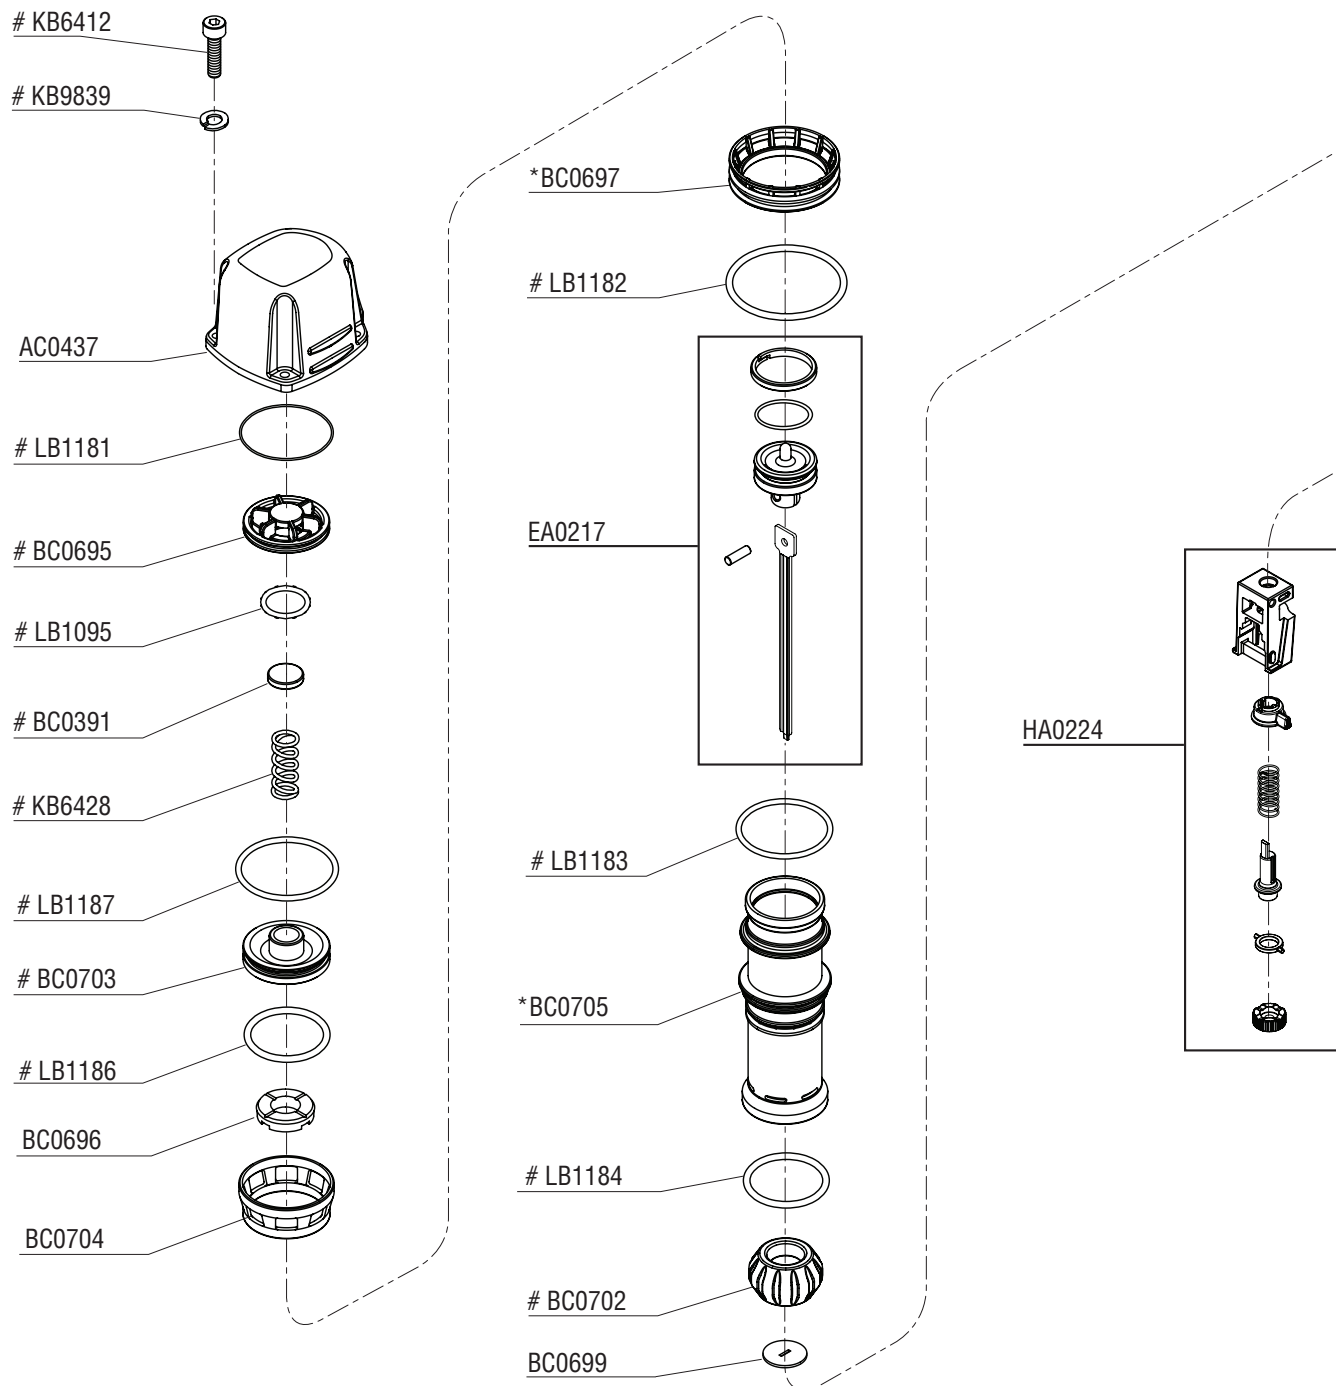

= Contents of YK0780 Kit

FinishPro® 18Mg

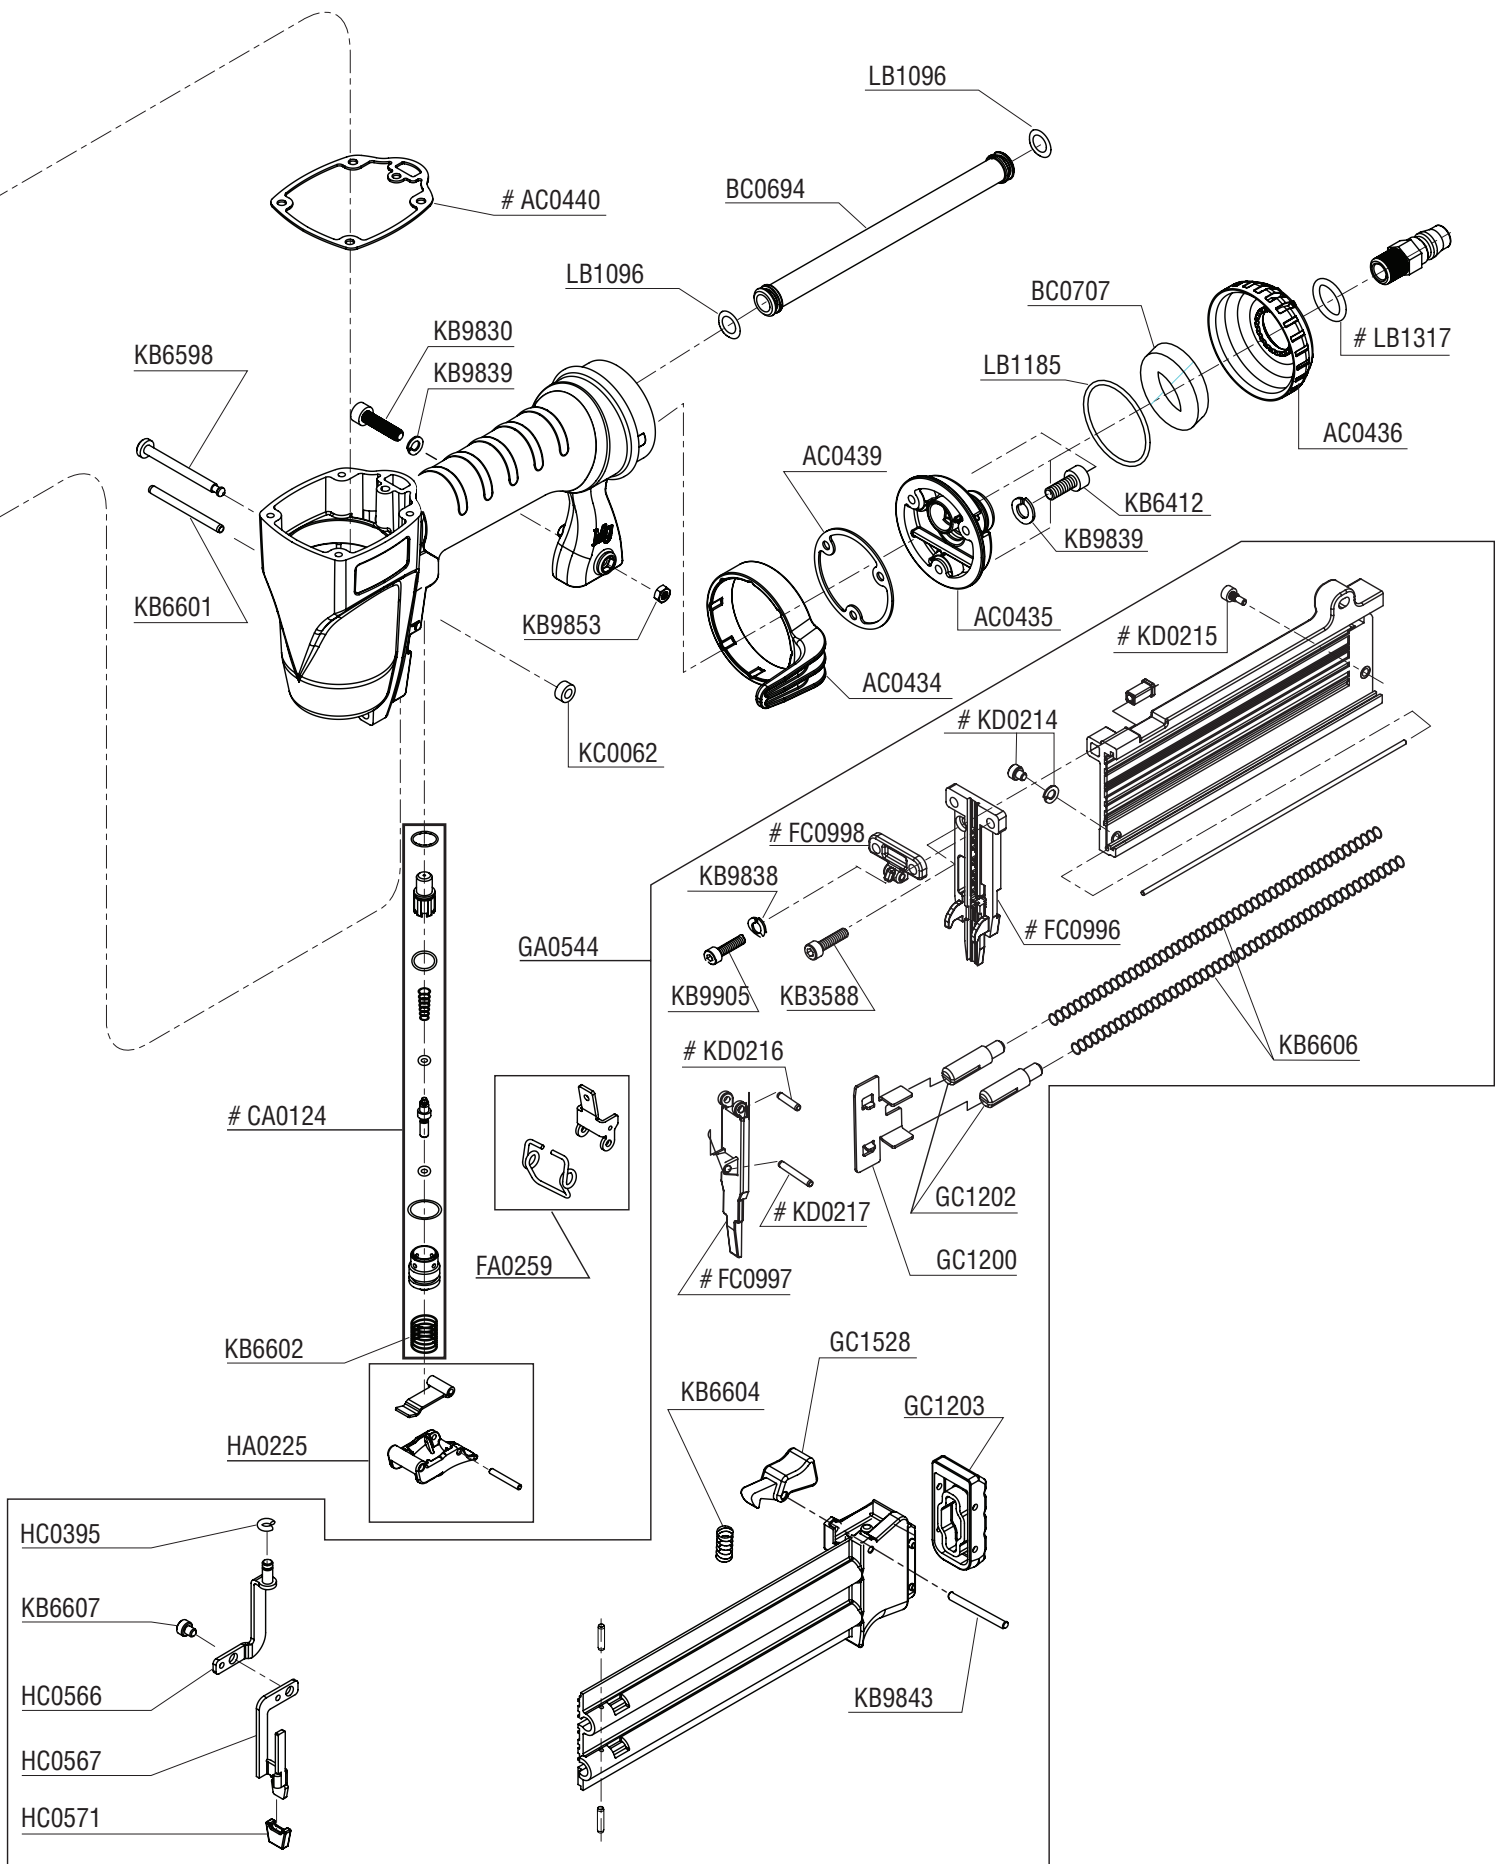

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AC0434	BELT HOOK	GANCHO DE CINTURÓN	CROCHET DE CEINTURE
AC0435	CAP	TAPA	BOUCHON
AC0436	COVER	CUBIERTA	COUVERCLE
AC0437	CAP	TAPA	BOUCHON
AC0439	SEAL (GASKET)	SELLO	JOINT
AC0440	SEAL (GASKET)	SELLO	JOINT
BC0391	SEAL	SELLO	JOINT
BC0694	TUBE	CILINDRO	CYLINDRE
BC0695	EXHAUST VALVE	VÁLVULA	VALVE
BC0696	STOP	TOPE	ARRÊT
BC0697	SPACER	SEPARADOR	ENTRETOISE
BC0699	WASHER	ARANDELA	RONDELLE
BC0702	STOP, PISTON	TOPE	ARRÊT
BC0703	VALVE	VÁLVULA	VALVE
BC0704	COLLAR	CILINDRO	CYLINDRE
BC0705	CYLINDER	CILINDRO	CYLINDRE
BC0707	MUFFLER	SILENCIADOR	SILENCIEUX
CA0124	TRIGGER VALVE ASSY	ASAMBLE DE GATILLO VÁLVULA	GÂCHETTE/ VALVE
EA0217	PISTON/DRIVER ASSY	ASAMBLE DE PISYON Y	PISTON/COUTEAU
FA0259	LATCH ASSY	UNETA	DOIGT DE RETENUE
FC0996	BACK PLATE	PLACA POSTERIOR	PLAT ARRIÈRE
FC0997	FRONT PLATE	PLACA DELANTERA	PLAT AVANT
FC0998	TOP FRONT PLATE	PLACA DELANTERA SUPERIOR	PLAT AVANT SUPÉRIEUR
GA0544	MAGAZINE ASSY	ASAMBLE DE CARRIL	RAIL D'ASSEMBLÉE
GC1200	FEEDER SHOE ASSY	ALIMENTADOR	POUSOIR
GC1202	RETAINER	JUNTA TÓRICA	RETENUE
GC1203	CAP	TAPA	BOUCHON
HA0224	SAFETY ELEMENT (UPPER)	SEGURO DE SUPERIOR	SÉCURITÉ EN DESSUS
HA0225	TRIGGER ASSY	ASAMBLE DE GATILLO	GÂCHETTED'ASSEMBLÉE
HC0395	RING	ANILLO	ANNEAU
HC0566	SAFETY ELEMENT (LOWER)	SEGURO DE INFERIOR	SÉCURITÉ EN DESSOUS
HC0567	SAFETY ELEMENT (LOWER)	SEGURO DE INFERIOR	SÉCURITÉ EN DESSOUS
HC0571	CUSHION (PAD)	AMORTIGUADOR	COUSSIN
KB3588	SCREW	TORNILLO	VIS
KB6412	SCREW	TORNILLO	VIS
KB6428	SPRING	RESORTE	RESSORT
KB6598	PIN	PASADOR	GOUPILLE
KB6601	PIN	PASADOR	GOUPILLE
KB6602	SPRING	RESORTE	RESSORT
KB6604	SPRING	RESORTE	RESSORT
KB6606	SPRING	RESORTE	RESSORT
KB6607	SCREW	TORNILLO	VIS
KB9830	SCREW	TORNILLO	VIS
KB9838	WASHER	ARANDELA	RONDELLE
KB9839	WASHER	ARANDELA	RONDELLE
KB9843	PIN	PASADOR	GOUPILLE
KB9853	NUT	TUERCA	ÉCROU
KB9905	SCREW	TORNILLO	VIS
KC0062	RETAINER	JUNTA TÓRICA	RETENUE
KD0214	SCREW	TORNILLO	VIS
KD0215	SCREW	TORNILLO	VIS
KD0216	PIN	PASADOR	GOUPILLE
KD0217	PIN	PASADOR	GOUPILLE
LB1095	SEAL	SELLO	JOINT
LB1096	SEAL	SELLO	JOINT
LB1181	SEAL	SELLO	JOINT
LB1182	SEAL	SELLO	JOINT
LB1183	SEAL	SELLO	JOINT
LB1184	SEAL	SELLO	JOINT
LB1185	SEAL	SELLO	JOINT
LB1186	SEAL	SELLO	JOINT
LB1187	SEAL	SELLO	JOINT
LB1317	SEAL	SELLO	JOINT