



SCN60XP

Coil Nailer



Parts Reference Guide
Guía de referencia de piezas
Pièces Guide de référence

Schematic Drawings Inside
Plano esquemático en el interior
Schéma intérieur

Repair Kit
YK0366

SENCO®

Senco Brands, Inc.
4270 Ivy Pointe Blvd.
Cincinnati, OH 45245
1-800-543-4596
www.senco.com

NFG052 • Revised January 11, 2016 (Replaces 2/28/2011)


Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596
(North and South America Only) or email: toolprof@senco.com

¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596
(sólo para América del Norte y del Sur) o envíe un correo electrónico: toolprof@senco.com

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: toolprof@senco.com

= Contents of YK0366 Repair Kit


Tool #	Model
520101N	Contact Actuation
522001N	Contact Actuation
520102N	Single Sequential
522002N	Single Sequential

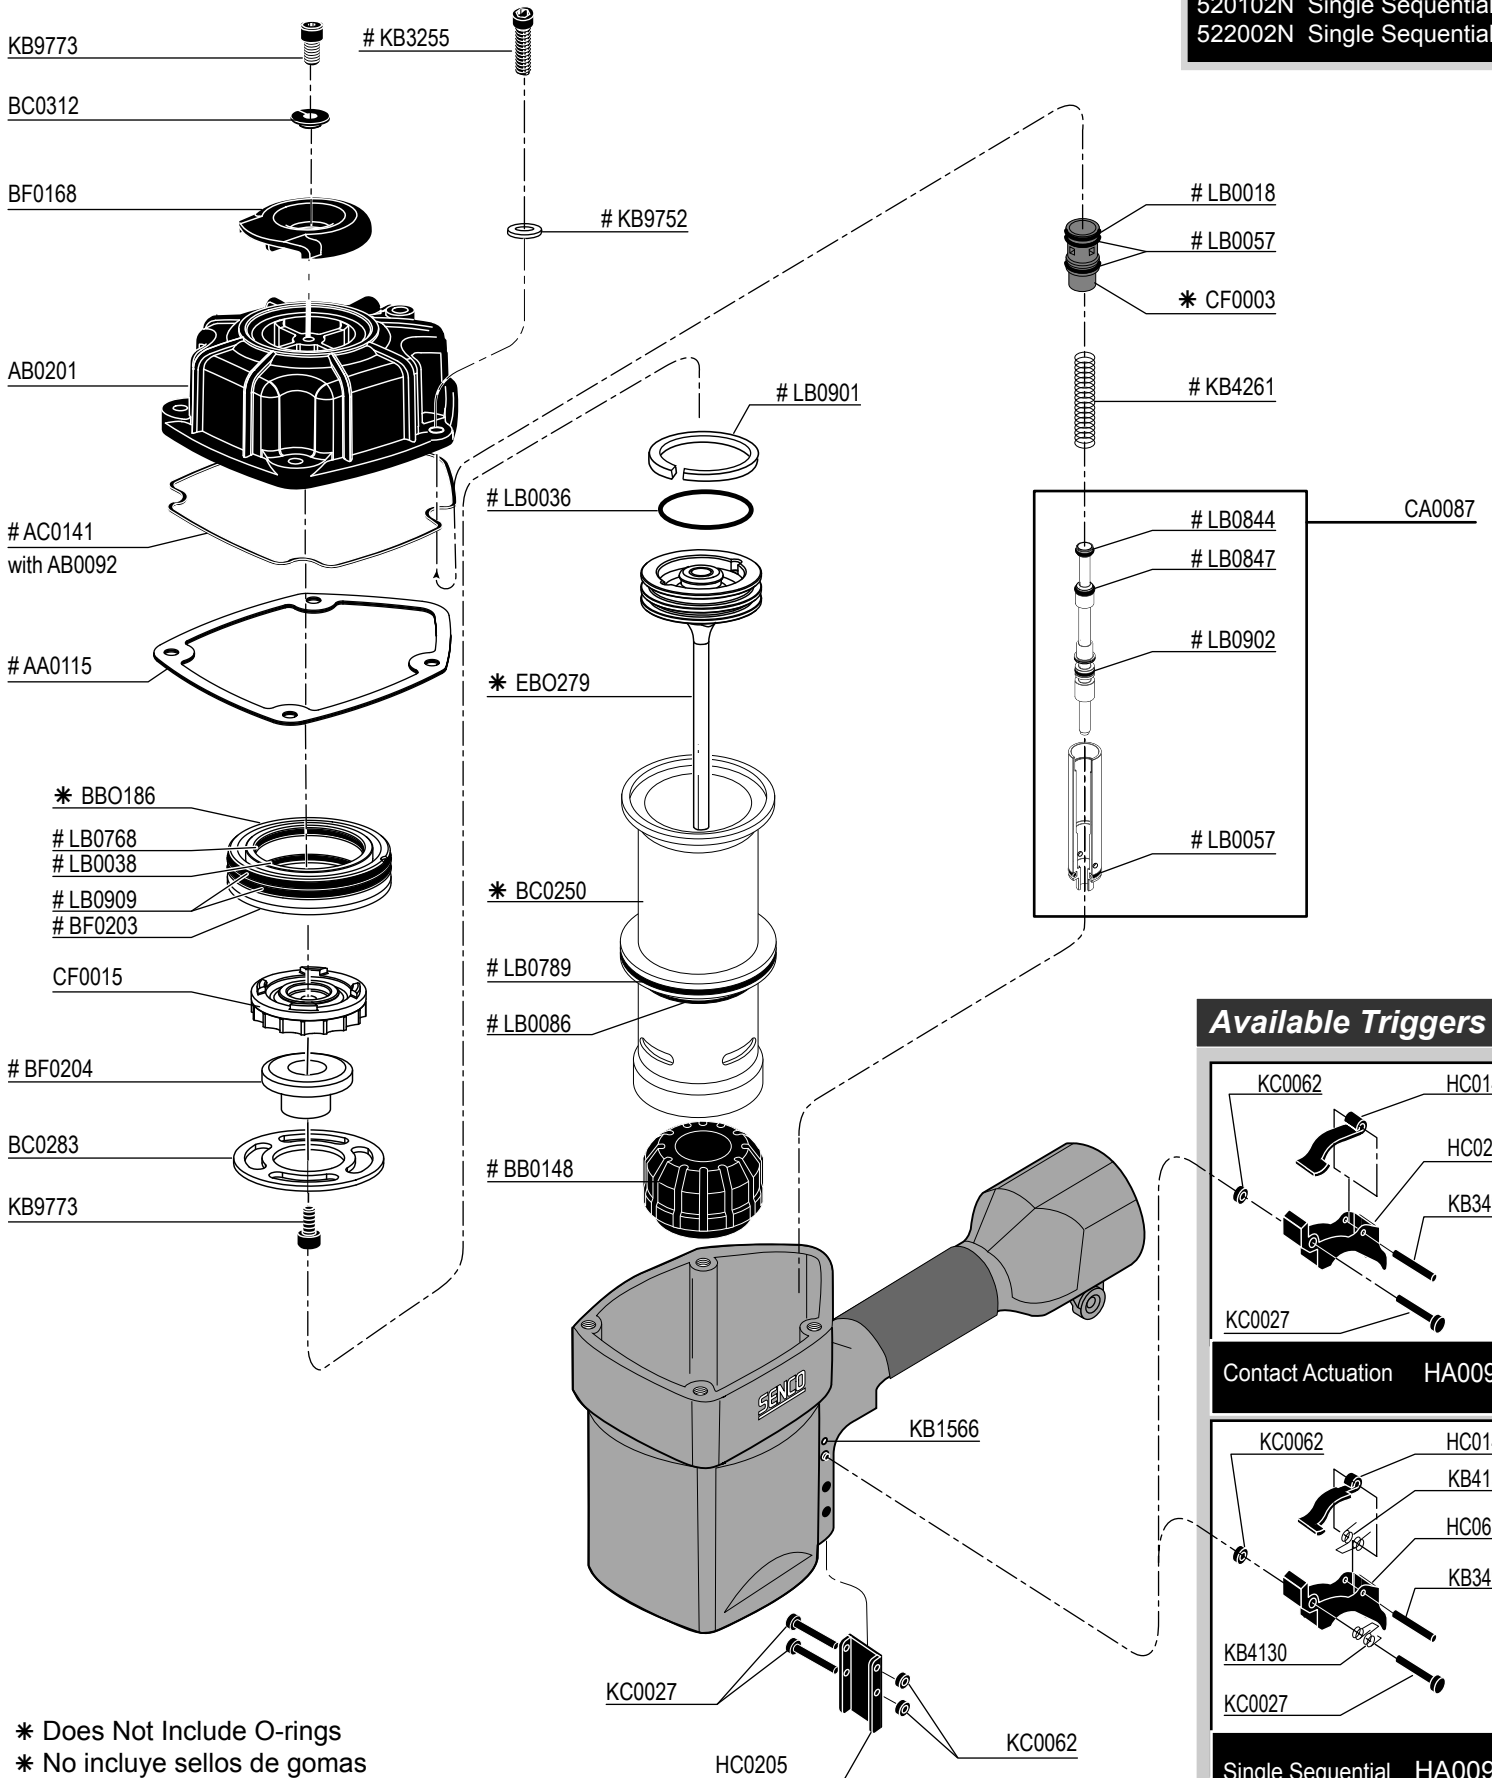

- * Does Not Include O-rings
- * No incluye sellos de gomas
- * Joints exclus

Coil Nailer

SCN60XP

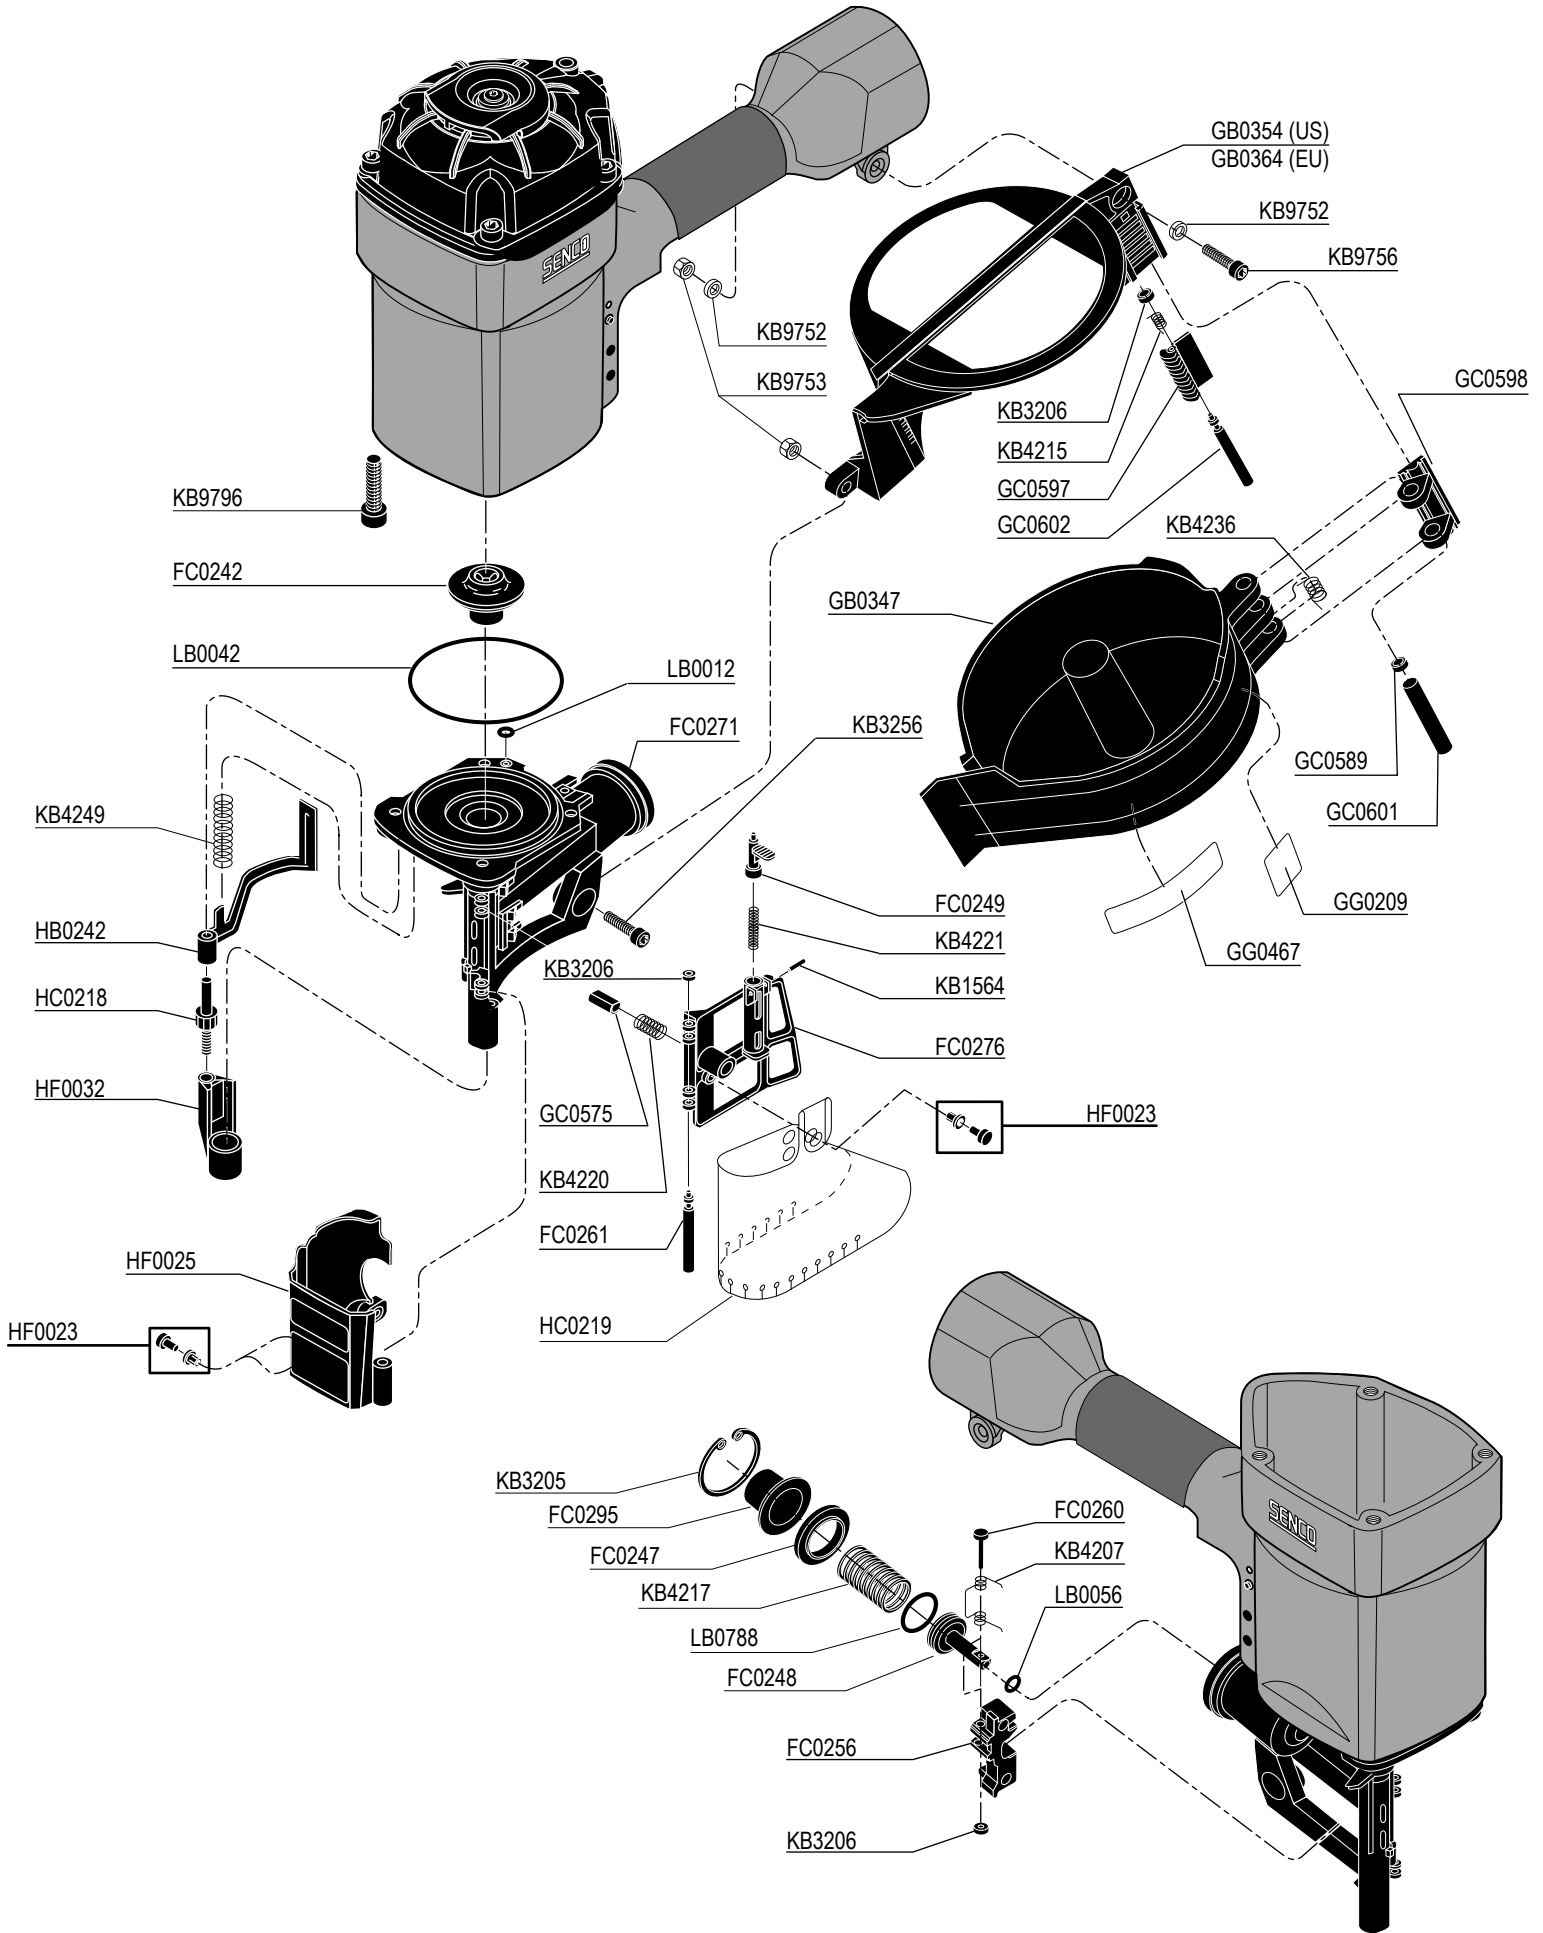

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

Part No.	Description	Descripción	Désignation
AA0115	Seal	Sello	Joint
AB0201	Cap	Tapa	Bouchon
AC0141	Seal (AB0092)	Sello	Joint
BB0148	Stop	Tope	Amortisseur
BC0250	Cylinder	Cilindro	Cylindre
BB0186	Firing Valve Piston	Piston	Piston
BC0283	Retainer	Junta Tórica	Retenue
BC0312	Bushing	Casquillo	Douille
BF0168	Deflector	Desviador	Défecteur
BF0203	Seal	Sello	Joint
BF0204	Retainer	Junta Tórica	Retenue
CA0087	Core Assembly	Asamble De Válvula	Ensemble Valve
CF0003	Housing	Alojamiento	Corps
CF0015	Valve	Válvula	Valve
EB0279	Piston Assembly	Asamble De Piston	Ensemble Piston-couteau
FC0242	Guide	Guía	Guide
FC0247	Stop	Tope	Arrêt
FC0248	Piston	Piston	Piston
FC0249	Latch	Uñeta	Doigt De Retenue
FC0256	Feed Pawl	Alimentador	Poussoir
FC0260	Pin	Pasador	Goupille
FC0261	Pin	Pasador	Goupille
FC0271	Guidebody	Placa De Nariz	Front
FC0276	Door	Puerta	Porte
FC0295	Cap	Tapa	Bouchon
GB0347	Magazine	Cargador	Magasin
GB0354	Magazine (US)	Cargador	Magasin
GB0364	Magazine (EU)	Cargador	Magasin
GC0575	Retainer	Junta Tórica	Retenue
GC0589	Retainer	Junta Tórica	Retenue
GC0597	Lock	Cerradura	Blocage
GC0598	Hinge	Gozne	Charnière
GC0601	Pin	Pasador	Goupille
GC0602	Pin	Pasador	Goupille
GG0209	Label	Etiqueta	Étiquette
GG0467	Label	Etiqueta	Étiquette
HA0093	Trigger	Gatillo	Gachette
HA0098	Trigger	Gatillo	Gachette
HB0242	Safety Element	Seguro	Palpeur De Sécurité
HC0148	Trigger	Gatillo	Gachette
HC0149	Trigger	Gatillo	Gachette
HC0205	Guide	Guía	Guide
HC0211	Trigger	Gatillo	Gachette
HC0218	Wheel	Manivela	Molette
HC0219	Dust Cover	Cubierta	Couvercle
HC0369	Trigger	Gatillo	Gachette
HF0023	Hook	Soporte	Support
HF0025	Cover	Cubierta	Porte
HF0032	Safety Element	Seguro	Palpeur De Sécurité
KB1564	Pin	Pasador	Goupille
KB1566	Pin	Pasador	Goupille
KB3205	Ring	Anillo	Anneau
KB3206	Retainer	Junta Tórica	Retenue
KB3255	Screw	Tornillo	Vis
KB3256	Screw	Tornillo	Vis
KB3495	Pin	Pasador	Goupille
KB4130	Spring	Resorte	Ressort
KB4131	Spring	Resorte	Ressort
KB4207	Spring	Resorte	Ressort
KB4215	Spring	Resorte	Ressort
KB4217	Spring	Resorte	Ressort
KB4220	Spring	Resorte	Ressort
KB4221	Spring	Resorte	Ressort
KB4236	Spring	Resorte	Ressort
KB4249	Spring	Resorte	Ressort
KB4261	Spring	Resorte	Ressort
KB9752	Washer	Rondana	Rondelle
KB9753	Nut	Tuerca	Écrou
KB9756	Screw	Tornillo	Vis
KB9773	Screw	Tornillo	Vis
KB9796	Screw	Tornillo	Vis
KC0027	Pin	Pasador	Goupille
KC0062	Retainer	Junta Tórica	Retenue
LB0012	Seal	Sello	Joint
LB0018	Seal	Sello	Joint
LB0036	Seal	Sello	Joint
LB0038	Seal	Sello	Joint
LB0042	Seal	Sello	Joint
LB0056	Seal	Sello	Joint
LB0057	Seal	Sello	Joint
LB0086	Seal	Sello	Joint
LB0768	Seal	Sello	Joint
LB0788	Seal	Sello	Joint
LB0789	Seal	Sello	Joint
LB0844	Seal	Sello	Joint
LB0847	Seal	Sello	Joint
LB0901	Seal	Sello	Joint
LB0902	Seal	Sello	Joint
LB0909	Seal	Sello	Joint