


# SCP40XP

## Pneumatic Concrete Pinner

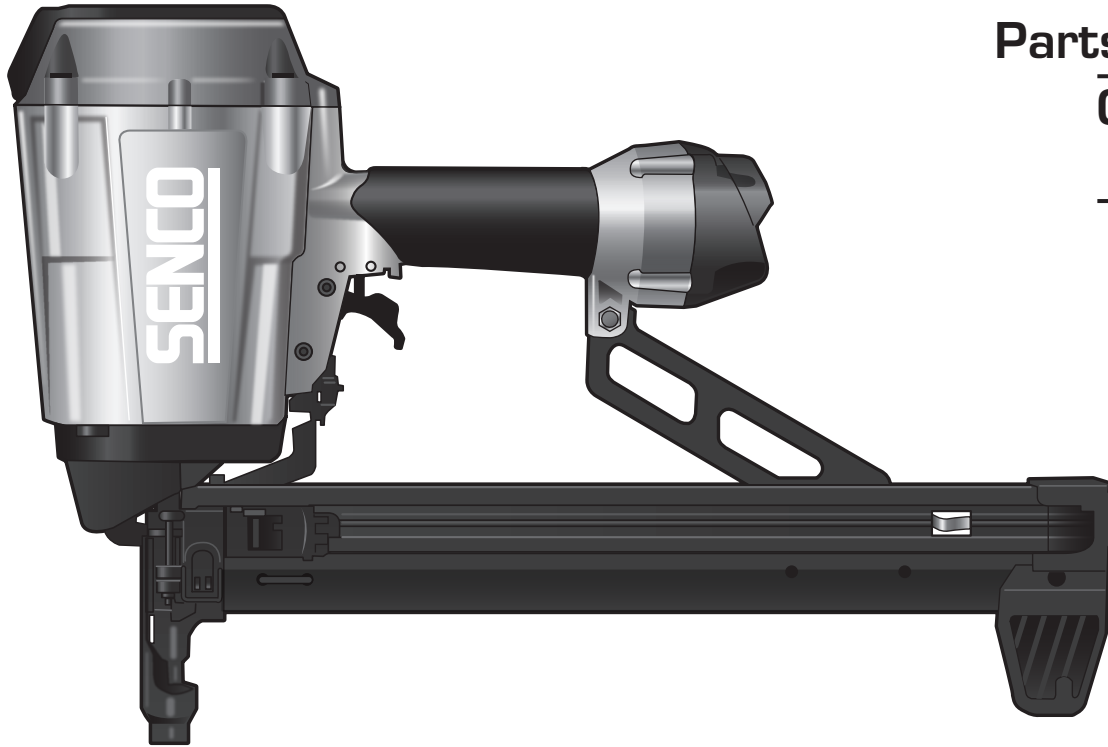

**Parts Reference Guide**  
**Guía de referencia**  
**de piezas**  
**Pièces Guide**  
**de référence**

Schematic Drawings Inside  
Plano esquemático en el interior  
Schéma intérieur



**Repair Kit**  
YK0444  
YK0445



KYOCERA-SENCO Industrial Tools, Inc.  
8450 Broadwell Road  
Cincinnati, OH 45244  
1-800-543-4596

[www.senco.com](http://www.senco.com)

**NFG07J • Revised September 9, 2023 (Replaces 3/21/2018)**

Questions? Comments? call Senco's toll-free Action-Line: 1-800-543-4596  
(North and South America Only) or email: [toolprof@senco.com](mailto:toolprof@senco.com)





¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596  
(sólo para América del Norte y del Sur) o envíe un correo electrónico: [toolprof@senco.com](mailto:toolprof@senco.com)

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596  
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: [toolprof@senco.com](mailto:toolprof@senco.com)



# Contents of YK0444 Repair Kit  
 ## Contents of YK0445 Repair Kit


Tool #  
 7J0009N

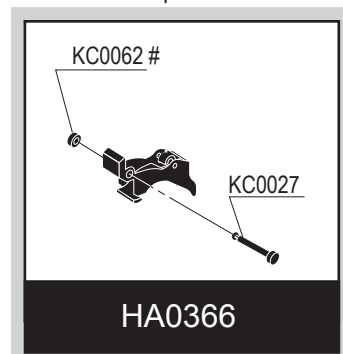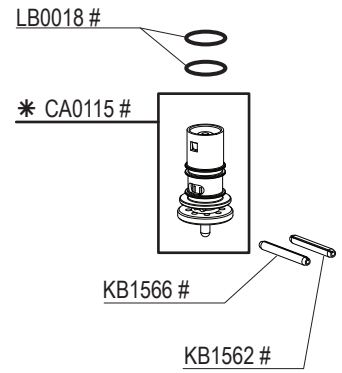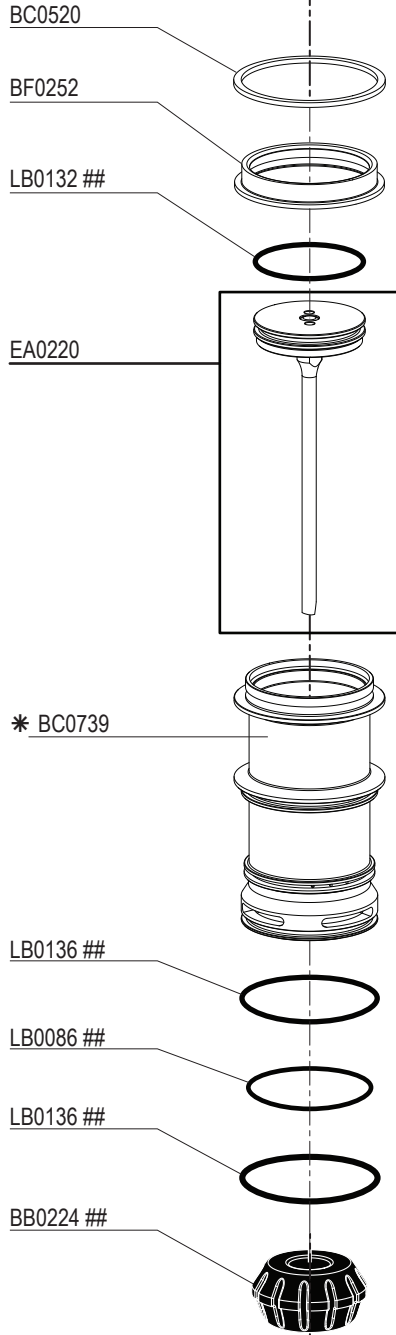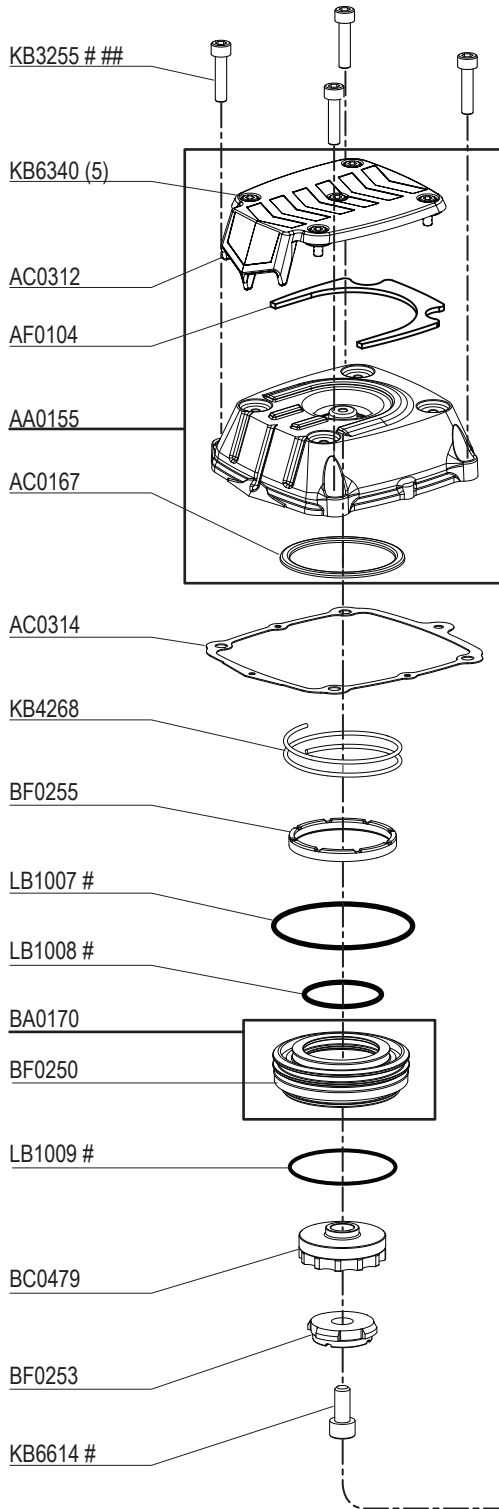

- \* Does Not Include O-rings
- \* No incluye sellos de gomas
- \* Joints exclus

# Pneumatic Concrete Pinner

# SCP40XP

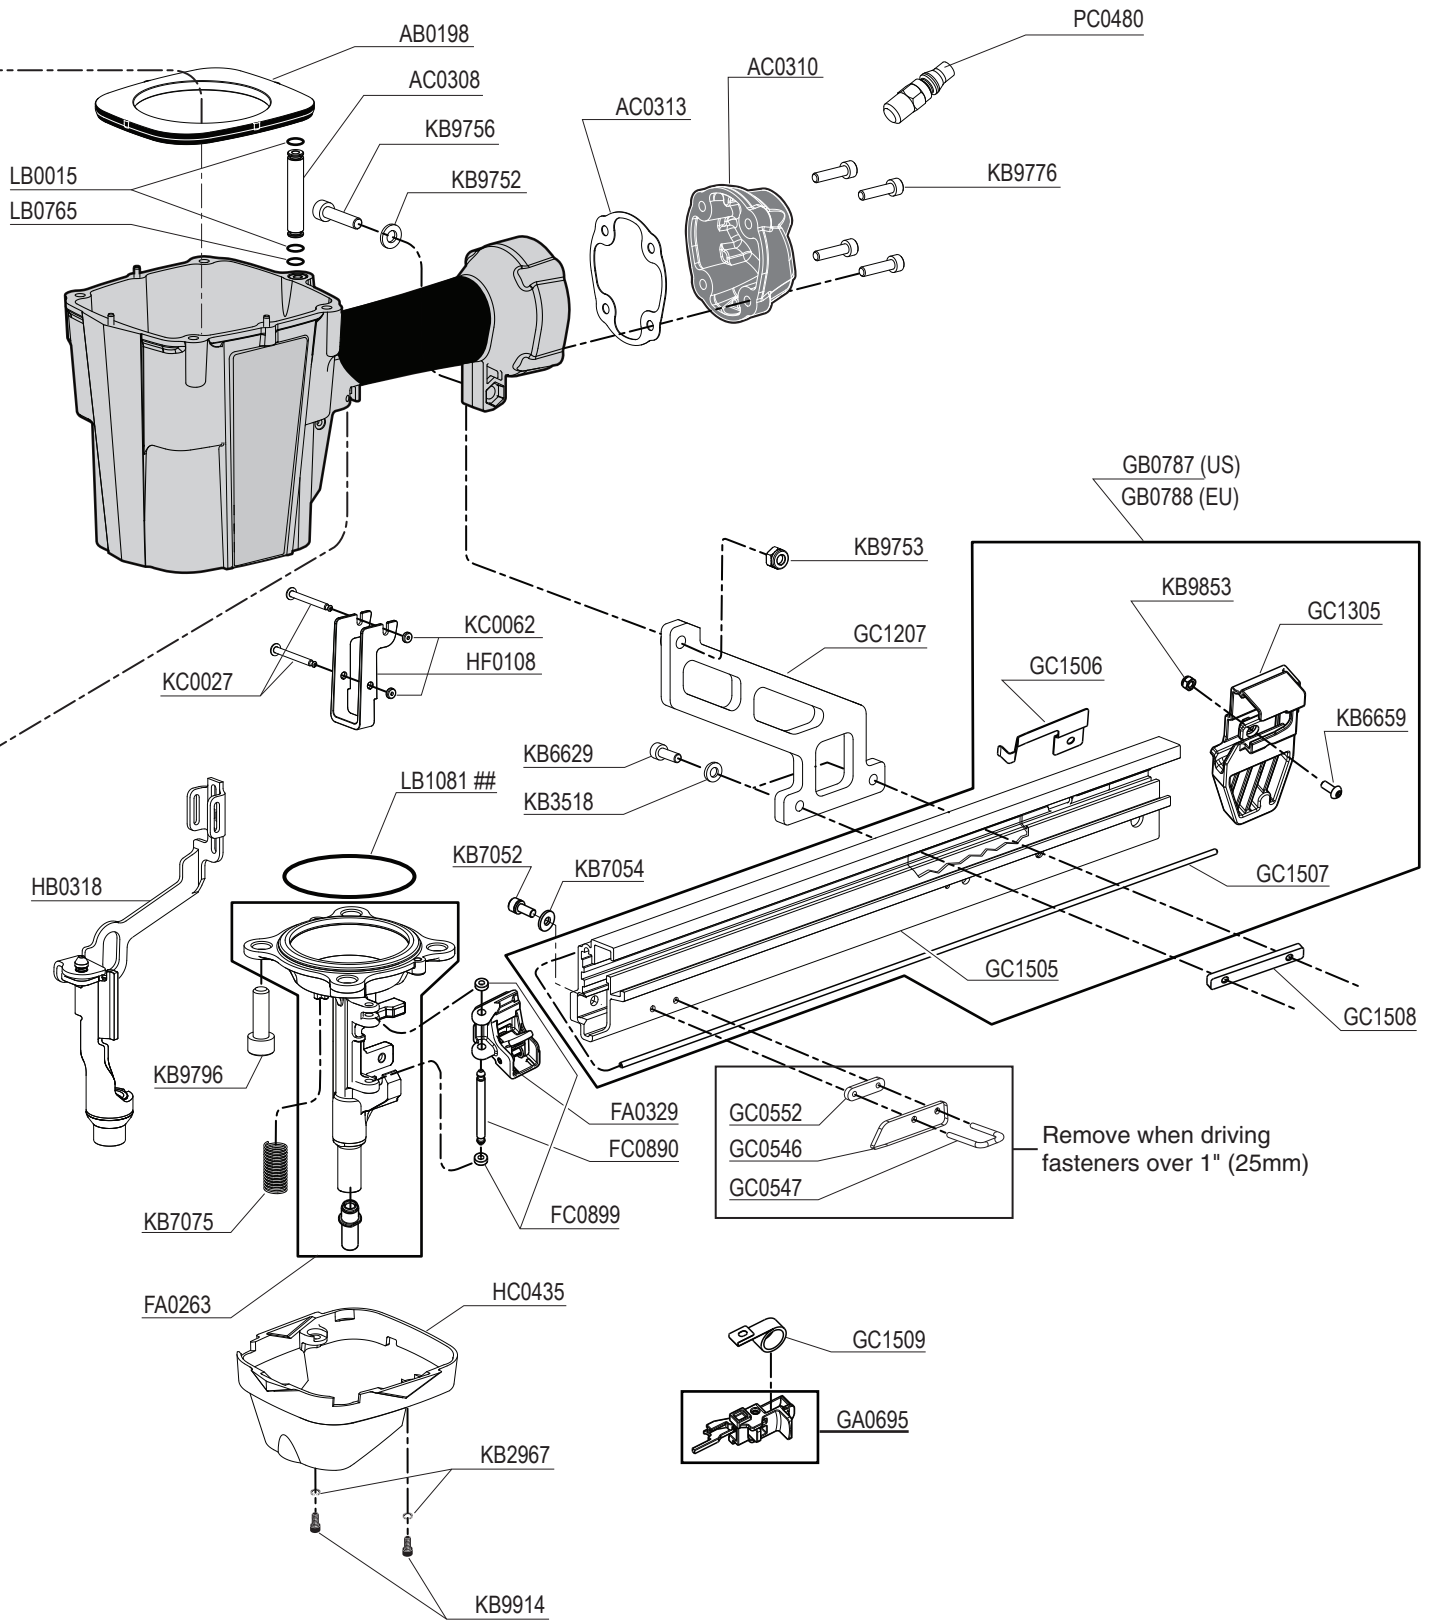



## REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AA0155	Cap	Tapa	Bouchon
AB0198	Pressure Plate	Seal	Joint
AB0213	Cap	Tapa	Bouchon
AC0167	Ring	Anillo	Anneau
AC0308	Tube	Cilindro	Cylindre
AC0310	End Cap	Tapa	Bouchon
AC0312	Deflector	Desviador	Défecteur
AC0313	Gasket	Seal	Joint
AC0314	Gasket	Seal	Joint
AF0104	Seal, Exhaust Deflector	Sello	Joint
BA0170	Valve Assembly	Asamble De Válvula	Valve d'Assemblée
BB0224	Stop	Tope	Arrêt
BC0479	Valve	Válvula	Valve
BC0520	Ring	Anillo	Anneau
BC0739	Cylinder	Cilindro	Cylindre
BF0250	Seal	Sello	Joint
BF0252	Retainer	Retén	Retenue
BF0253	Bumper	Amortiguador	Amortisseur
BF0255	Bumper	Amortiguador	Amortisseur
CA0115	Valve Assembly	Asamble De Válvula	Valve d'Assemblée
EA0220	Driver Assembly	Percusor	Couteau
FA0263	Guide Body Assembly	Asamble de Placa de Nariz	Ensemble Front
FA0329	Door Assembly	Conjunto De Puerta	Ensemble De Porte
FC0890	Pin	Pasador	Goupille
FC0899	Grommet	Retén	Retenue
GA0695	Feeder Shoe	Zapata Alimentadora	Sabot d'Alimentation
GB0788	Magazine Assembly (EU)	Conjunto Del Cargador	Ensemble De Magasin
GB0799	Magazine Assembly (US)	Conjunto Del Cargador	Ensemble De Magasin
GC0546	Block-out	Bloque	Bloc
GC0547	Clip	Clip	Clip
GC0552	Grommet	Reten	Retenue
GC1207	Magazine Bracket	Soporte Del Cargador	Support De Magasin
GC1305	Magazine Cover	Cubierta Del Cargador	Couvercle De Magasin
GC1505	Magazine	Cargador	Magasin
GC1506	Nail Detainer	Retén De Clavos	Maintien De Clou
GC1507	Wear Rod	Barra Antiabrasiva	Barre Antiabrasif
GC1508	Magazine Bracket	Soporte Del Cargador	Support De Magasin
GC1509	Feed Spring	Resorte	Ressort
HA0366	Trigger Assembly	Asamble De Gatillo	Ensemble Gâchette
HB0318	Safety Assembly	Asamble De Seguro	Palpeur De Sécurité
HC0435	Shroud	Protector	Cache
HF0108	Liner	Separador	Entretoise
KB1562	Pin	Pasador	Goupille
KB1566	Pin	Pasador	Goupille
KB2967	Washer	Arandela	Rondelle
KB3255	Screw	Tornillo	Vis
KB3518	Washer	Arandela	Rondelle
KB4268	Spring	Resorte	Ressort
KB6340	Screw	Tornillo	Vis
KB6614	Screw	Tornillo	Vis
KB6629	Screw	Tornillo	Vis
KB6659	Screw	Tornillo	Vis
KB6794	Screw	Tornillo	Vis
KB7052	Magazine Screw	Tornillo Del Cargador	Vis De Magasin
KB7054	Magazine Washer	Arandela Del Cargador	Rondelle De Magasin
KB7075	Spring	Resorte	Ressort
KB9752	Washer	Arandela	Rondelle
KB9753	Nut	Tuerca	Écrou
KB9756	Screw	Tornillo	Vis
KB9776	Screw	Tornillo	Vis
KB9796	Screw	Tornillo	Vis
KB9853	Nail Detainer Lock Nut	Contratuercas Del Retén De Clavos	Contre-écrou De Maintien De Clou
KB9914	Screw	Tornillo	Vis
KC0027	Pin	Pasador	Goupille
KC0062	Retainer	Retén	Retenue
LB0015	Seal	Sello	Joint
LB0018	Seal	Sello	Joint
LB0086	Seal	Sello	Joint
LB0765	Seal	Sello	Joint
LB0132	Seal	Sello	Joint
LB0136	Seal	Sello	Joint
LB1007	Seal	Sello	Joint
LB1008	Seal	Sello	Joint
LB1009	Seal	Sello	Joint
LB1081	Seal	Sello	Joint
PC0480	Air Fitting	Conexión De Aire	Raccord Air