



**PS15RXP**

## Wide Crown Roofing Stapler

**Parts Reference Guide**  
**Guía de referencia de piezas**  
**Pièces Guide de référence**



Schematic Drawings Inside  
Plano esquemático en el interior  
Schéma intérieur

**Repair Kit**

YK0783

YK0784

YK0818

**Block-Out Kit**

YK0883

# SENCO®

Senco Brands, Inc.  
4270 Ivy Pointe Blvd.  
Cincinnati, OH 45245  
1-800-543-4596  
[www.senco.com](http://www.senco.com)

**NFG09U • October 2, 2018**



Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596  
(North and South America Only) or email: [toolprof@senco.com](mailto:toolprof@senco.com)

¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596  
(sólo para América del Norte y del Sur) o envíe un correo electrónico: [toolprof@senco.com](mailto:toolprof@senco.com)

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596  
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: [toolprof@senco.com](mailto:toolprof@senco.com)

# = Contents of YK0783 Kit  
 ## = Contents of YK0784 Kit  
 ### = Contents of YK0818 Kit


Tool #	Model
9U0001N	Contact-Actuation
9U2001N	Contact-Actuation

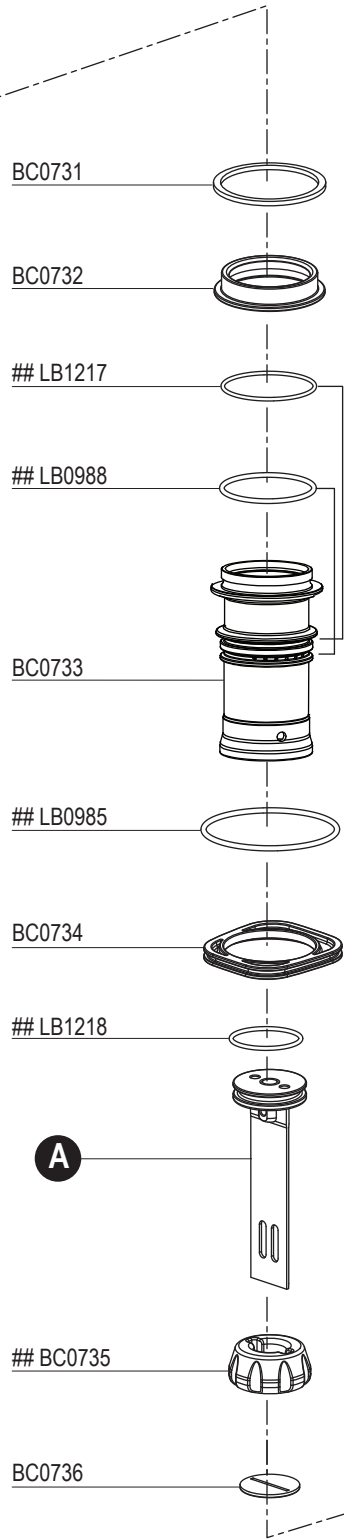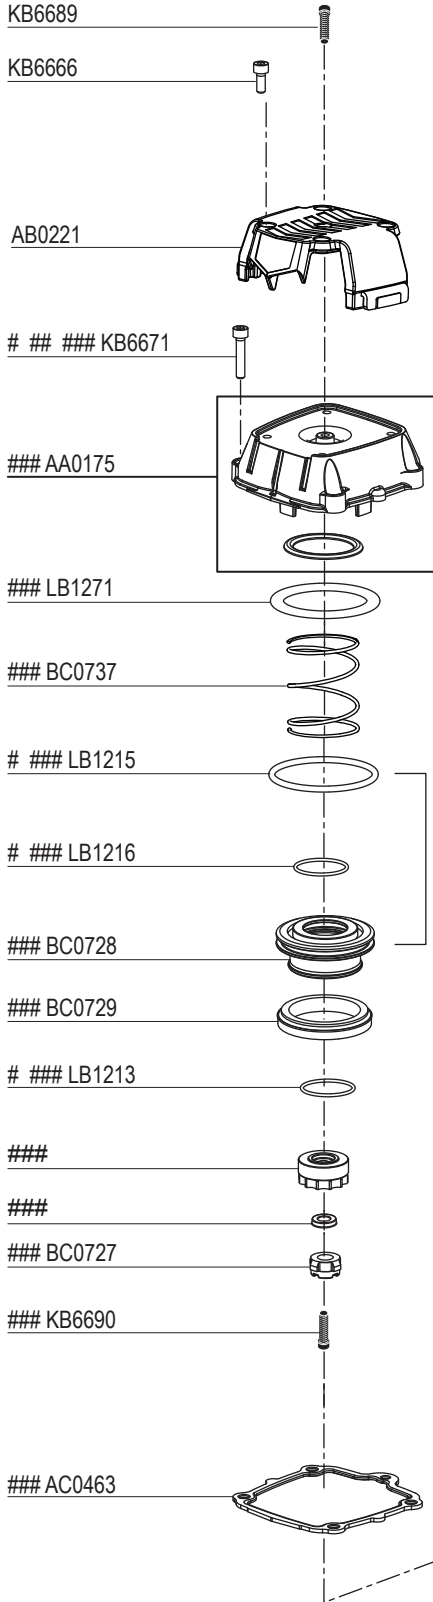


**A**

EA0229	Standard Piston Driver Assembly
EA0389	3/16" Longer Piston Driver Assembly

**Available Triggers**




HA0287  
Contact-Actuation



HA0236  
Single Sequential

# Wide Crown Roofing Stapler

# PS15RXP

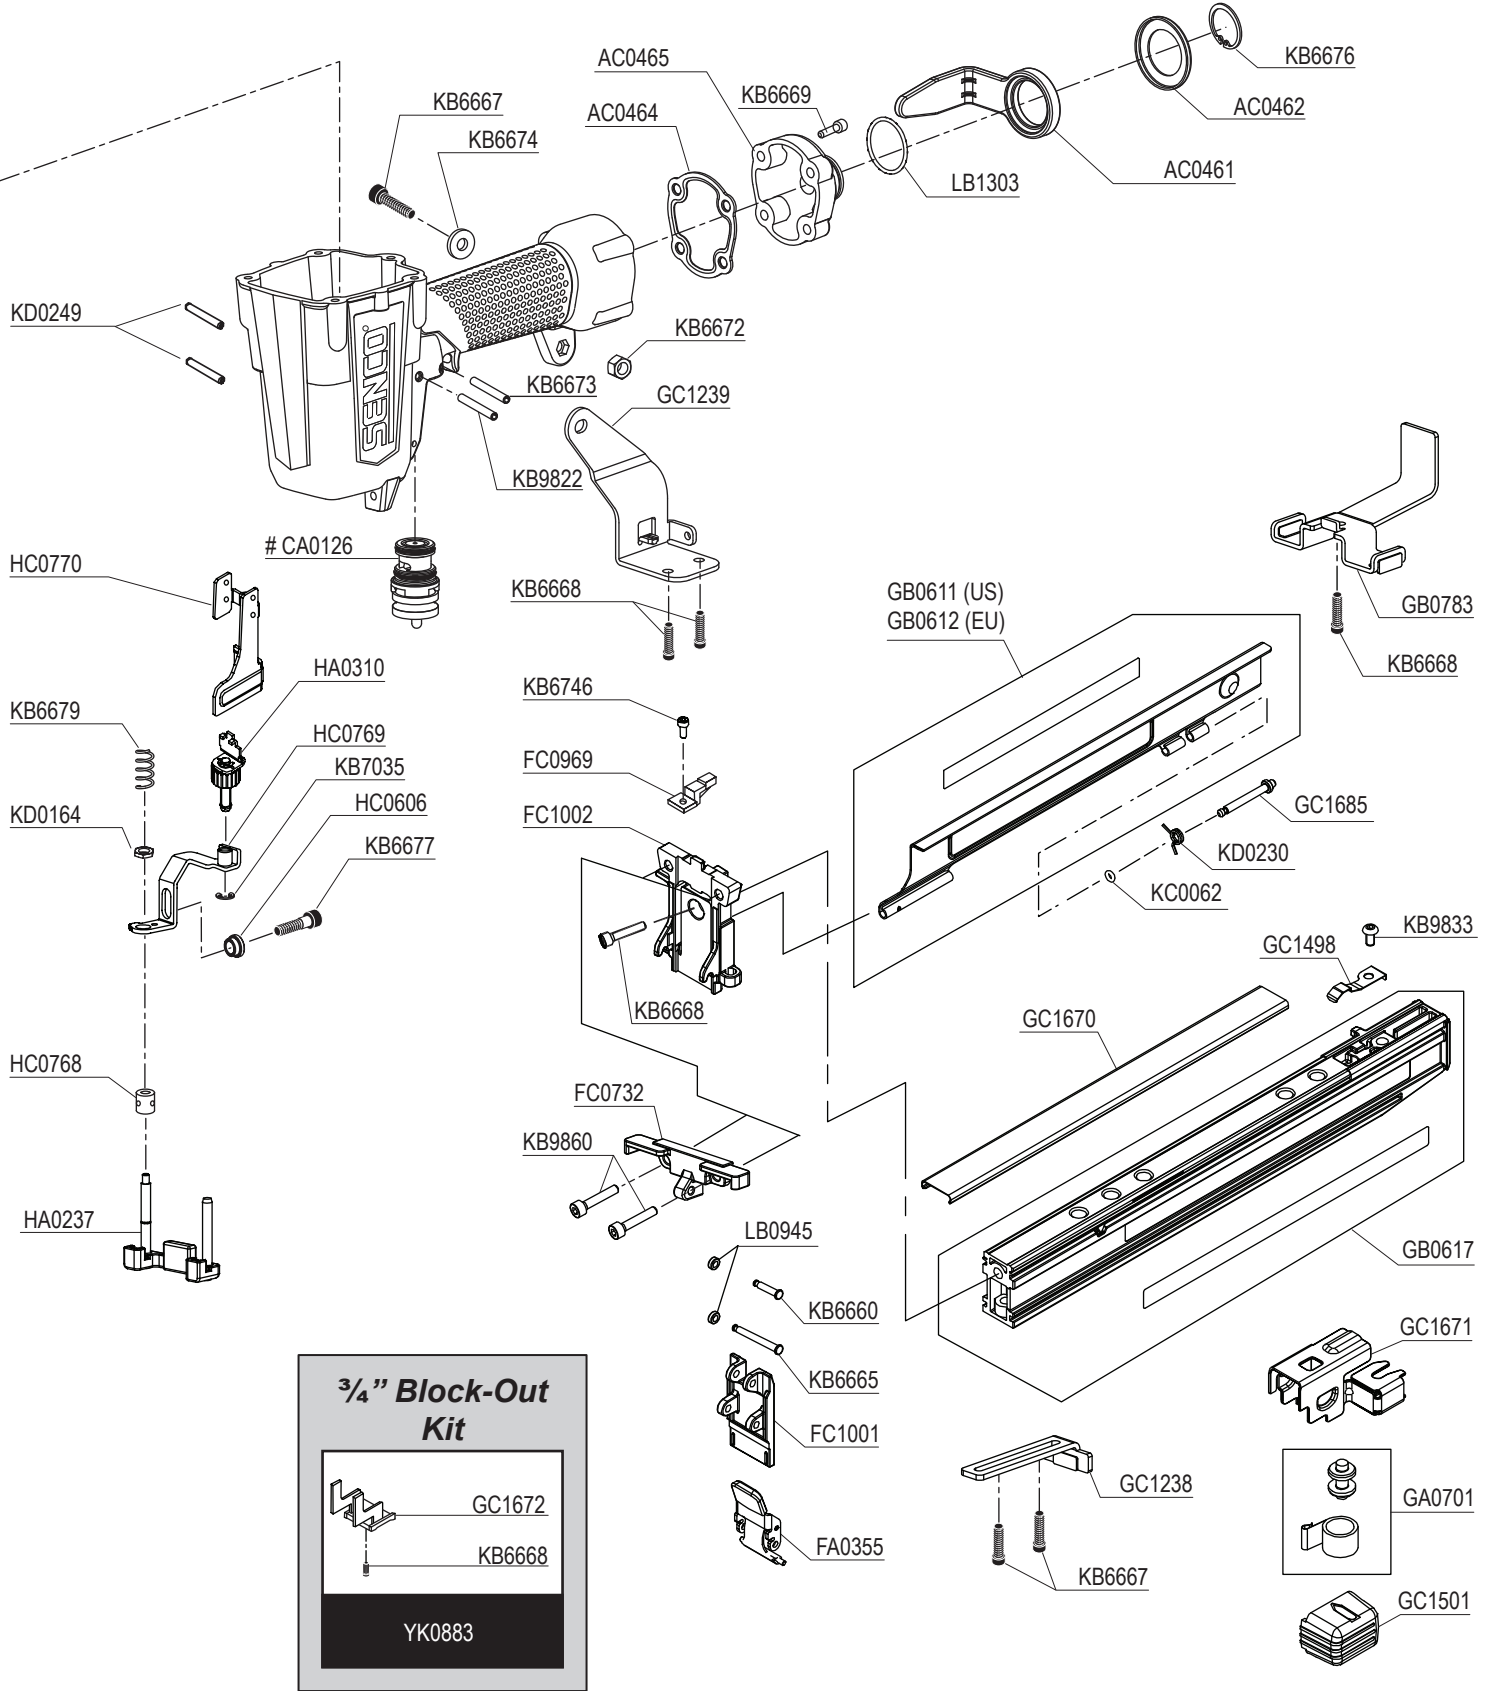

## REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

Part No.	Description	Descripción	Désignation
AA0175	Cap	Tapa	Bouchon
AB0221	Deflector	Desviador	Défecteur
AC0461	Belt Hook	Gancho De Cinturón	Crochet De Ceinture
AC0462	Cover	Cubierta	Couvercle
AC0463	Gasket	Seal	Joint
AC0464	Gasket	Seal	Joint
AC0465	End Cap	Tapa Terminal	Bouchon d'Extrémité De Rail
AC0642	Cover	Cubierta	Couvercle
BC0727	Stop	Toppe	Arrêt
BC0728	Valve	Válvula	Valve
BC0729	Seal	Sello	Joint
BC0731	Spacer	Separador	Entretoise
BC0732	Seal	Sello	Joint
BC0733	Cylinder Sleeve	Cilindro	Cylindre
BC0734	Spacer	Separador	Entretoise
BC0735	Piston Stop	Amortiguador	Amortisseur
BC0736	Guide	Guía	Guide
BC0737	Spring	Resorte	Ressort
CA0126	Trigger Valve Assembly	Asamble De Válvula	Valve d'Assemblée
EA0229	Piston / Driver Assembly	Percusor	Couteau
EA0389	Piston / Driver Assembly	Percusor	Couteau
FA0355	Latch Assembly	Asamble De Uñeta	Doigt De Retenue d'Assemblée
FC0732	Plate	Placa	Plaque
FC0969	Guide	Guía	Guide
FC1001	Front Plate	Placa	Plaque
FC1002	Back Plate	Platte	Plaque
GA0701	Spring Roller	Rodillo del resorte	Rouleau de ressort
GB0611	Magazine Cover (US)	Cubierta	Couvercle
GB0612	Magazine Cover (EU)	Cubierta	Couvercle
GB0617	Magazine Assembly	Asamble De Cargador	Magasin d'Assemblée
GB0783	Guard	Placa	Bouclier Antiabrasif
GC1238	Bracket	Soporte	Support De Fixation
GC1239	Bracket	Soporte	Support De Fixation
GC1498	Latch	Cierre	Verrou
GC1501	Grip	Apretón	Griff
GC1670	Guide	Guía	Guide
GC1671	Feeder Shoe	Alimentador	Poussoir
GC1685	Pin	Pasador	Goupille
HA0236	Trigger Assembly (Single Sequential)	Asamble De Gatillo	Ensemble Gâchette
HA0237	Lower Safety	Asamble De Seguro	Palpeur De Sécurité
HA0287	Trigger Assembly (Contact Actuation)	Asamble De Gatillo	Ensemble Gâchette
HA0310	Safety Element Assembly	Asamble De Seguro	Ensemble Palpeur De Sécurité
HC0606	Bushing	Casquillo	Douille
HC0768	Lower Barrel Nut	Inferior Barril Tuerca	Écrou Inférieur De Baril
HC0769	Safety Element	Seguro	Palpeur De Sécurité
HC0770	Guide	Guía	Guide
KB6660	Pin	Pasador	Goupille
KB6662	Pin	Pasador	Goupille
KB6665	Pin	Pasador	Goupille
KB6666	Screw	Tornillo	Vis
KB6667	Screw	Tornillo	Vis
KB6668	Screw	Tornillo	Vis
KB6669	Screw	Tornillo	Vis
KB6671	Screw	Tornillo	Vis
KB6672	Nut	Tuerca	Écrou
KB6673	Pin	Pasador	Goupille
KB6674	Washer	Arandela	Rondelle
KB6676	Ring	Anillo	Anneau
KB6677	Screw	Tornillo	Vis
KB6679	Spring	Resorte	Ressort
KB6689	Screw	Tornillo	Vis
KB6690	Screw	Tornillo	Vis
KB6746	Screw	Tornillo	Vis
KB7035	Ring	Anillo	Anneau
KB9822	Pin	Pasador	Goupille
KB9833	Screw	Tornillo	Vis
KB9860	Screw	Tornillo	Vis
KD0164	Nut	Tuerca	Écrou
KD0230	Spring	Resorte	Ressort
KD0249	Pin	Pasador	Goupille
LB0945	Seal	Sello	Joint
LB0985	Seal	Sello	Joint
LB0988	Seal	Sello	Joint
LB1212	Seal	Sello	Joint
LB1213	Seal	Sello	Joint
LB1215	Seal	Sello	Joint
LB1216	Seal	Sello	Joint
LB1217	Seal	Sello	Joint
LB1218	Seal	Sello	Joint
LB1271	Seal	Sello	Joint
LB1303	Seal	Sello	Joint
YK0783	Repair Kit	Kit De Reparación	Kit De Réparation
YK0784	Repair Kit	Kit De Reparación	Kit De Réparation
YK0818	Repair Kit	Kit De Reparación	Kit De Réparation
YK0883	¾" Block-Out Kit	Kit Para Bloquear	Kit Pour Bloquer