

TN41P1P

16 Gauge Finish Nailer



Parts Reference Guide

Guía de referencia
de piezas

Pièces Guide
de référence

Schematic Drawings Inside
Plano esquemático en el interior
Schéma intérieur

Repair Kit

YK0906
YK0907




NFD0TN4 • Issued September 19, 2023

KYOCERA-SENCO Industrial Tools, Inc.
8450 Broadwell Road
Cincinnati, OH 45244
1-800-543-4596
www.senco.com



Questions? Comments? call Senco's toll-free Action-Line: 1-800-543-4596
(North and South America Only) or email: toolprof@senco.com

¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596
(sólo para América del Norte y del Sur) o envíe un correo electrónico: toolprof@senco.com

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco: 1-800-543-4596
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: toolprof@senco.com

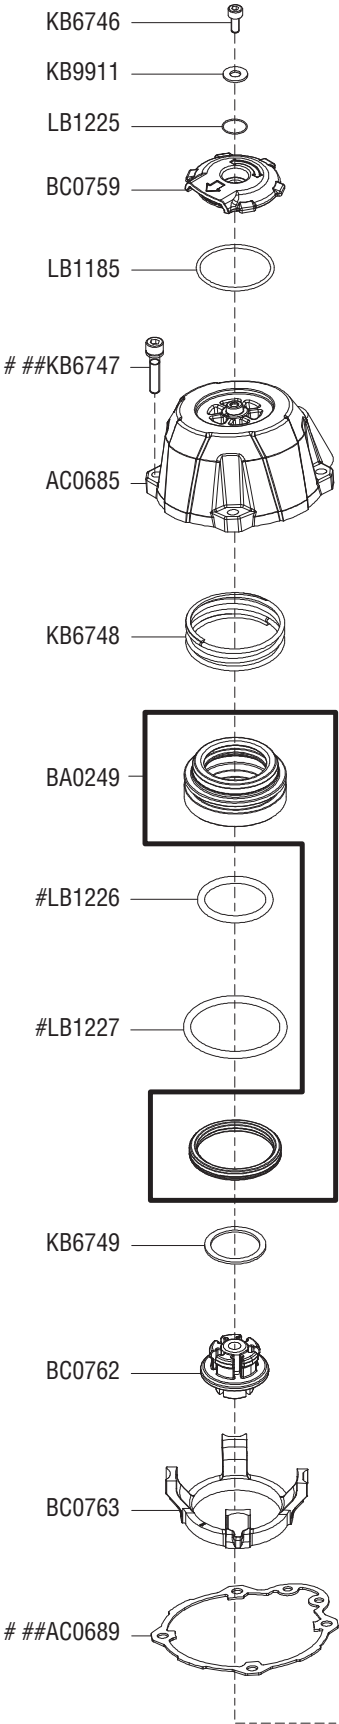


= Contents of YK0906 Repair Kit A
= Contents of YK0907 Repair Kit B
*Does Not Include O-Rings

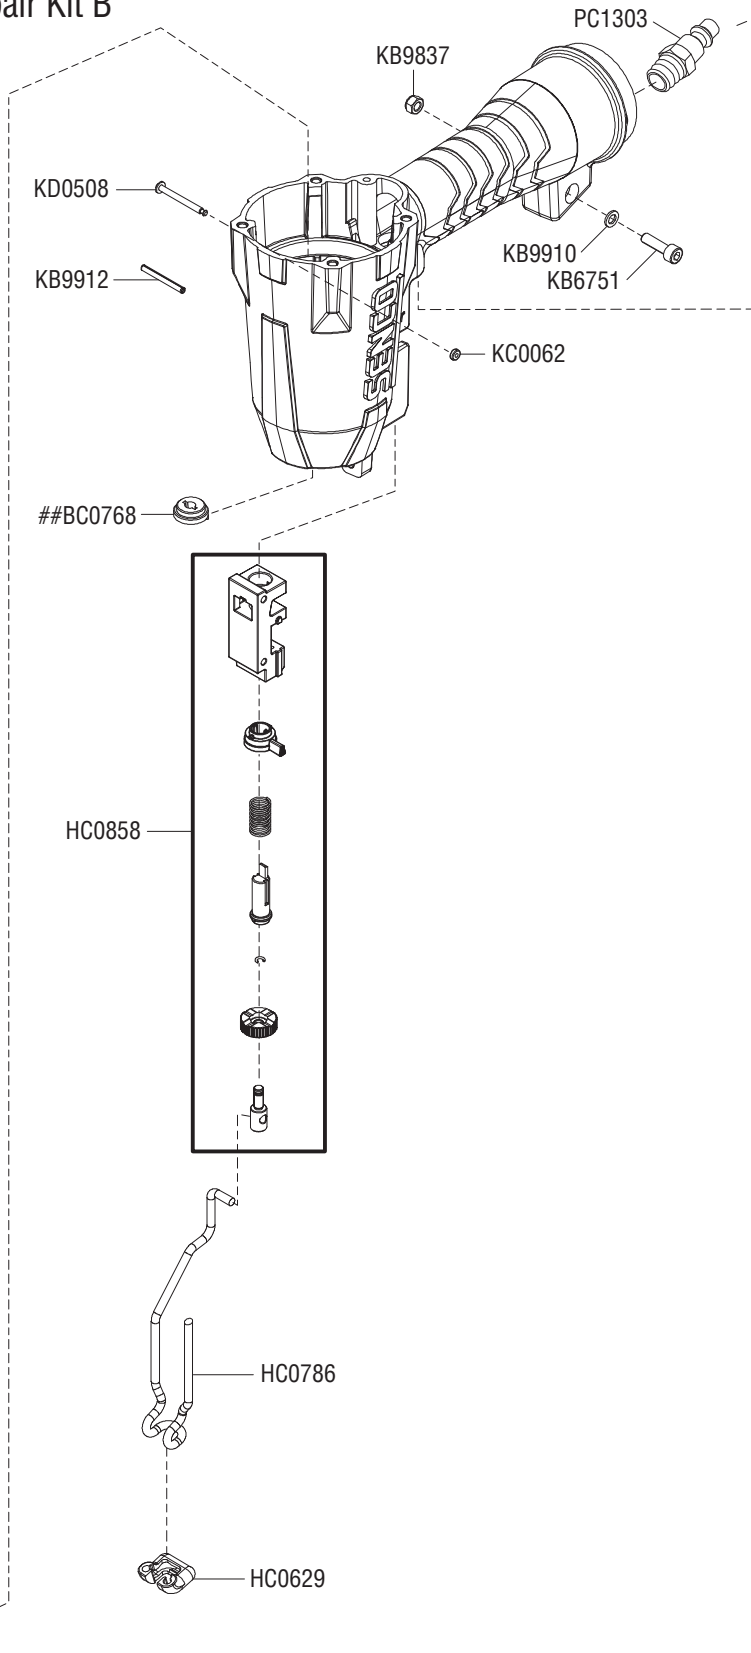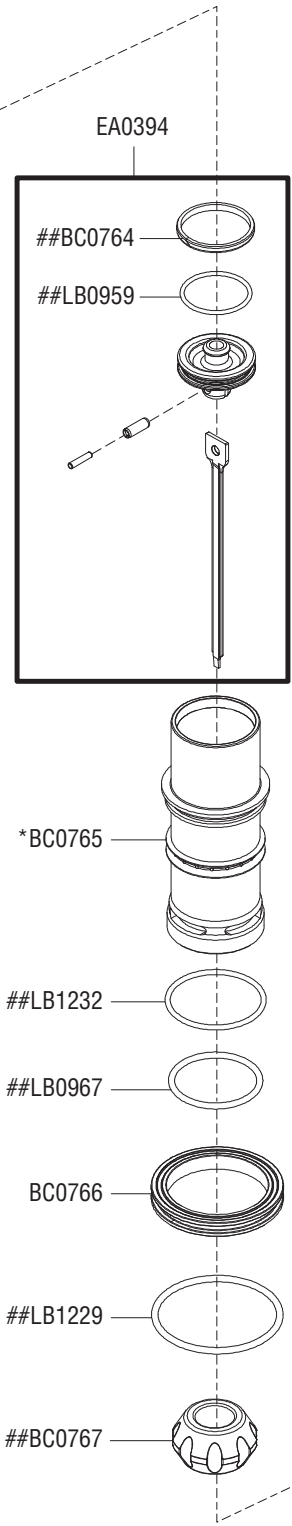

16 Gauge Finish Nailer

TN41P1P

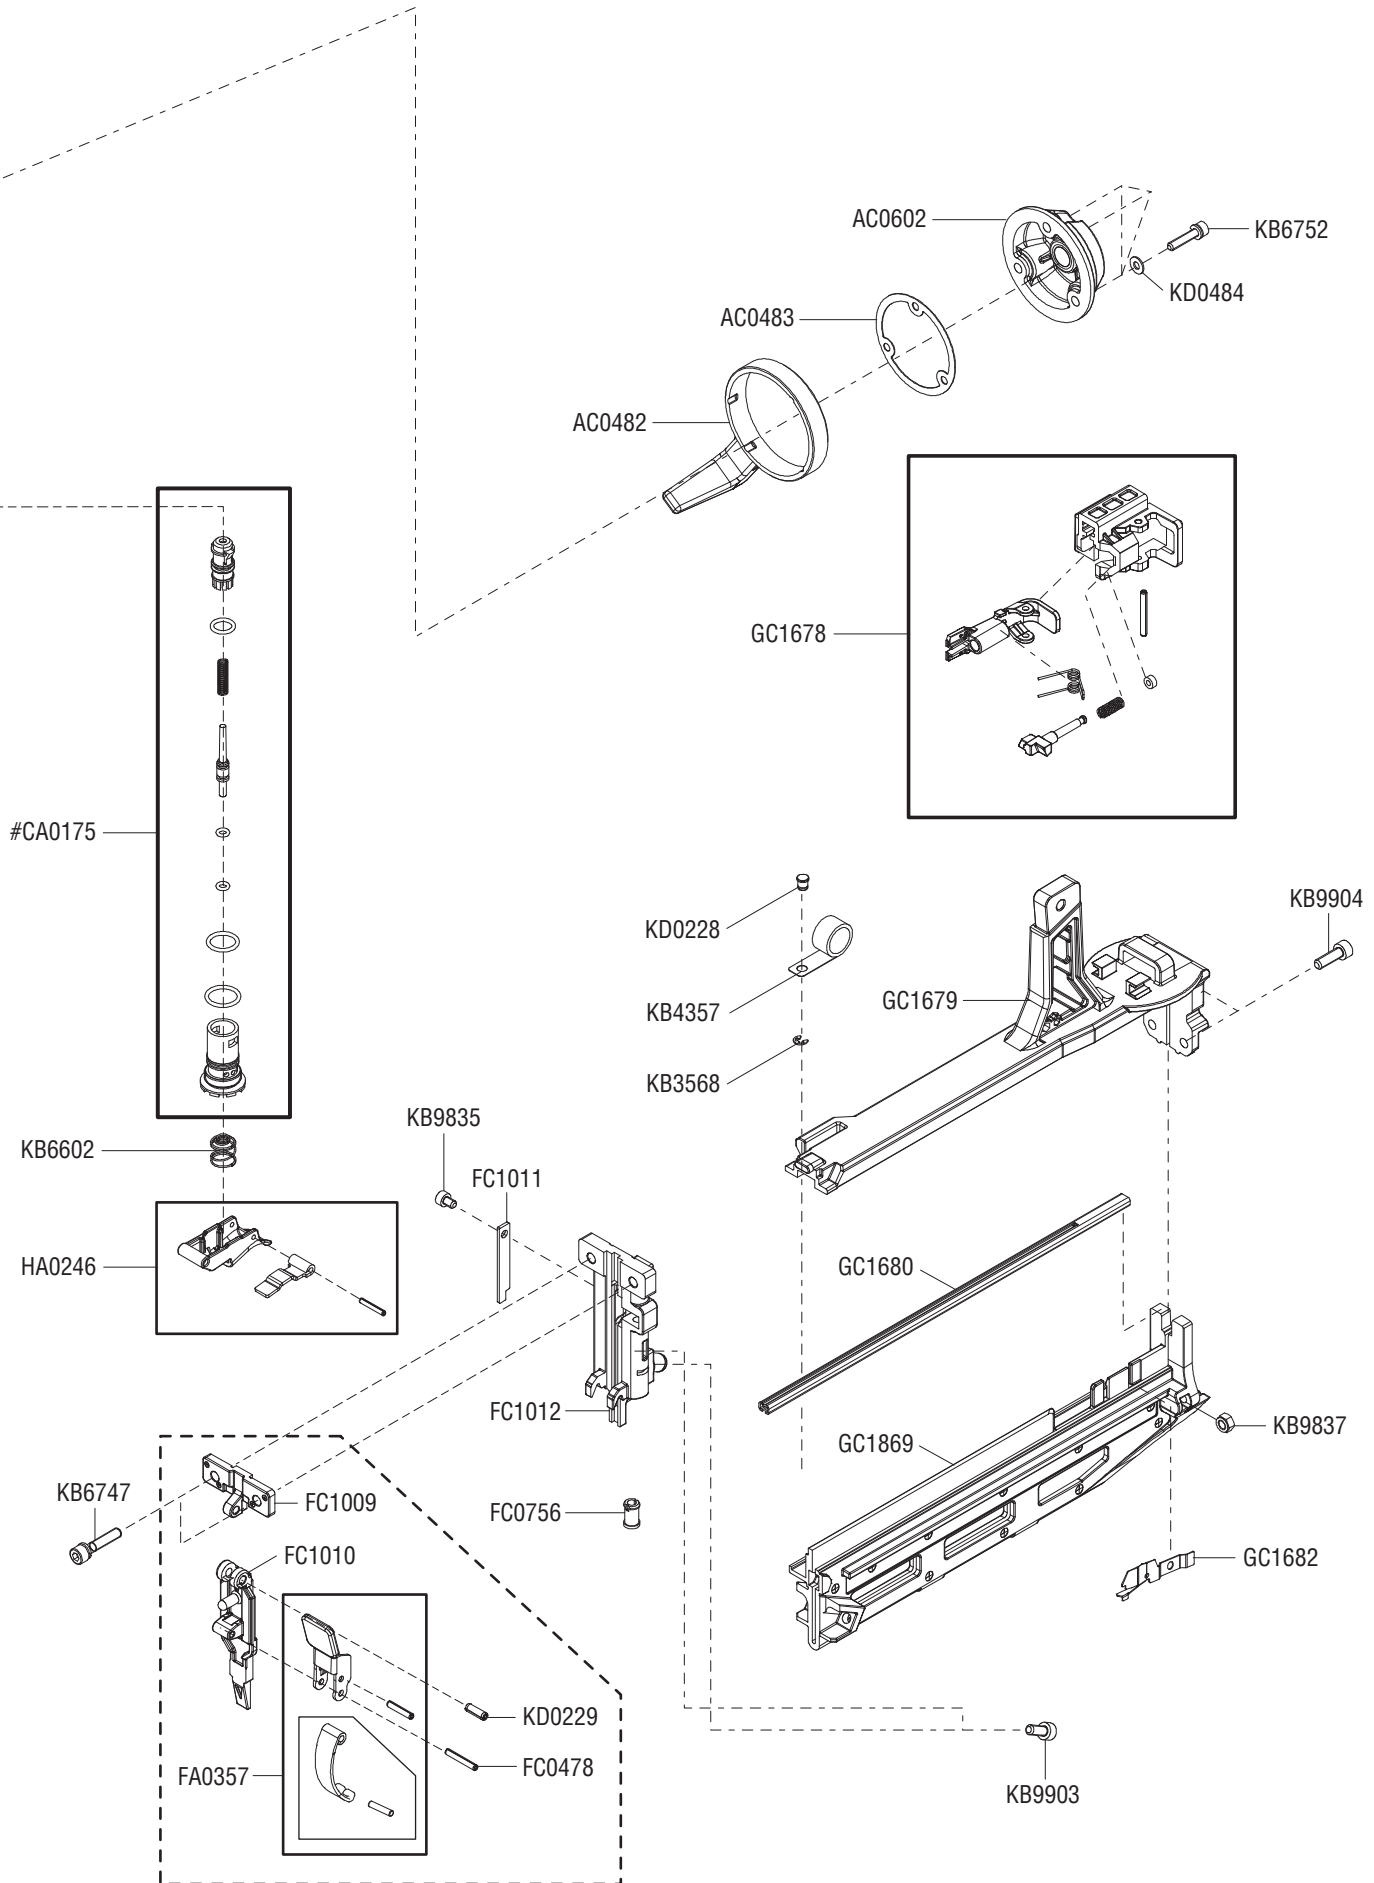



16 Gauge Finish Nailer

TN41P1P

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AC0482	BELT HOOK	GANCHO PARA CINTURÓN	CROCHET DE CEINTURE
AC0483	SEAL	SELLO	SCELLER
AC0602	CAP	TAPA	BOUCHON
AC0685	TOP CAP	TAPA SUPERIOR	CAPUCHON SUPÉRIEUR
AC0689	SEAL	SELLO	SCELLER
BA0249	VALVE ASSEMBLY	ENSAMBLAJE DE LA VÁLVULA	ASSEMBLAGE DE LA SOUPAPE
BC0759	DEFLECTOR	DESVIADOR	DÉFLECTEUR
BC0762	RETAINER	ANTICIPO	RETENUE
BC0763	COLLAR	CILINDRO	CYLINDRE
BC0764	RING	ANILLO	BAGUE
BC0765	CYLINDER	CILINDRO	CYLINDRE
BC0766	SPACER	SEPARADOR	ENTRETOISE
BC0767	STOP	TOPE	ARRÊT
BC0768	GUIDE	GUÍA	GUIDE
CA0175	TRIGGER VALVE SET	JUEGO DE LA VÁLVULA DEL DISPARADOR	ENSEMBLE DE SOUPAPE DE DÉCLENCHEMENT
EA0394	PISTON DRIVER ASY	ASAMBLE DE PISYON Y	PISTON/COUTEAU
FA0357	CLICK LEVER SET	JUEGO DE PALANCA DE AJUSTE	ENSEMBLE DE LEVIER À CLIQUET
FC0478	PIN	PASADOR	GOUPILLE
FC0756	BUSHING	BUJE	DOUILLE
FC1009	PLATE	PLACA	PLAQUE
FC1010	FRONT PLATE	PLACA	PLAQUE
FC1011	COVER	CUBIERTA	COUVERCLE
FC1012	GUIDE	GUÍA	GUIDE
GC1678	CARRIAGE SET	JUEGO DE CARRO	ENSEMBLE DE TRANSPORT
GC1679	UPPER MAG.	CARGADOR	MAGASIN
GC1680	NAIL RAIL	CARRIL	RAIL
GC1682	PLATE	PLACA	PLAT
GC1869	LOWER MAG.	CARGADOR	MAGASIN
HA0246	TRIGGER ASSEMBLY	ASAMBLE DE GATILLO	ENSEMBLE GÂCHETTE
HC0629	NO-MAR PAD	AMORTIGUADOR	COUSSIN
HC0786	SAFETY ELEMENT	ASAMBLE DE SEGURO	PALPEUR DE SÉCURITÉ
HC0858	SAFETY ELEMENT SET	JUEGO DE ELEMENTO DE SEGURIDAD	ENSEMBLE D'ÉLÉMENT DE SÉCURITÉ
KB3568	E-RING	ANILLO E	CIRCLIP DE TYPE E
KB4357	SPRING	RESORTE	RESSORT
KB6602	SPRING	RESORTE	RESSORT
KB6746	SCREW	TORNILLO	VIS
KB6747	SCREW	TORNILLO	VIS
KB6748	SCREW	TORNILLO	VIS
KB6749	WASHER	ARANDELA	RONDELLE
KB6751	SCREW	TORNILLO	VIS
KB6752	SCREW	TORNILLO	VIS
KB9835	SCREW	TORNILLO	VIS
KB9837	NUT	TUERCA	ÉCROU
KB9903	SCREW	TORNILLO	VIS
KB9904	SCREW	TORNILLO	VIS
KB9910	WASHER	ARANDELA	RONDELLE
KB9911	WASHER	ARANDELA	RONDELLE
KB9912	PIN	PASADOR	GOUPILLE
KC0062	RETAINER	JUNTA TÓRICA	RETENUE
KD0228	PIN	PASADOR	GOUPILLE
KD0229	PIN	PASADOR	GOUPILLE
KD0484	WASHER	ARANDELA	RONDELLE
KD0508	PIN	PASADOR	GOUPILLE
LB0959	SEAL	SELLO	JOINT
LB0967	SEAL	SELLO	JOINT
LB1185	SEAL	SELLO	JOINT
LB1225	O-RING	ANILLO O	CIRCLIP DE TYPE O
LB1226	SEAL	SELLO	JOINT
LB1227	SEAL	SELLO	JOINT
LB1229	SEAL	SELLO	JOINT
LB1232	O-RING	ANILLO O	CIRCLIP DE TYPE O
PC1303	SWIVEL FITTING	CONEXIÓN GIRATORIA	RACCORD TOURNANT
YK0906	REPAIR KIT A	KIT DE REPARACIÓN A	ENSEMBLE DE RÉPARATION A
YK0907	REPAIR KIT B	KIT DE REPARACIÓN B	ENSEMBLE DE RÉPARATION B